



E88478

10. Disconnect reversing lamp switch connector.

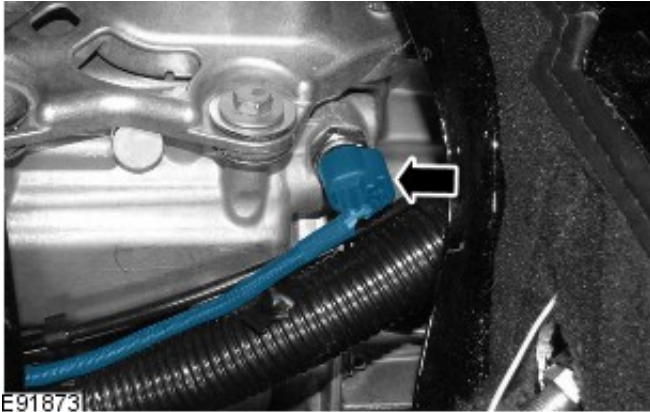

E91873


11. Remove the reversing lamp switch.
 - Remove and discard the O-ring seal.

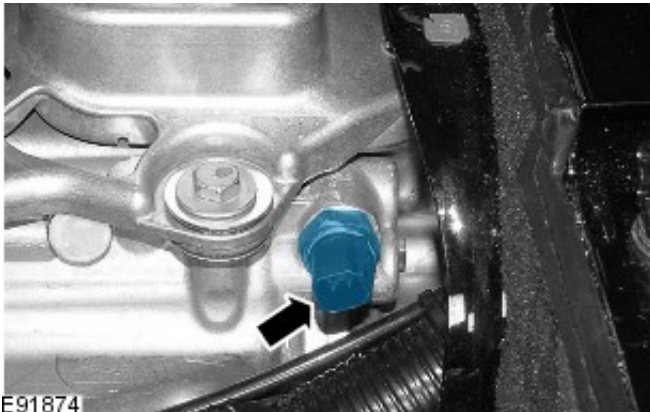

E91874

Installation

1. Install the reversing lamp switch.
 - Install a new O-ring seal.
 - Tighten to 20 Nm (15 lb/ft).

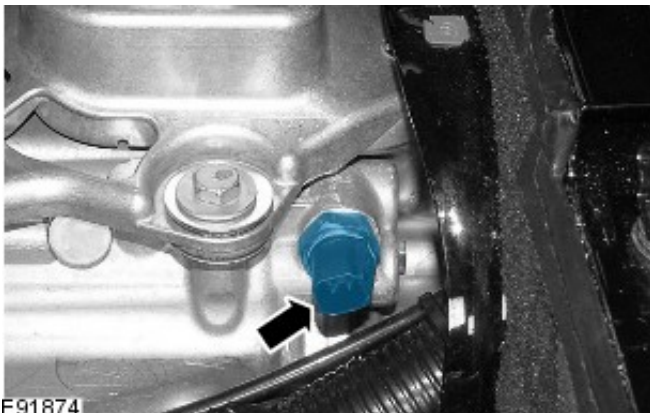

E91874

2. Connect the reversing lamp switch electrical connector.
3. Install the transmission cover panel.
 - Install the screws.
4. Install the gaiter with the selector levers attached.
 - Install the selector levers.