


E87640


7. Remove the container.

8. Connect the 2 fuel cooler coolant pipes.

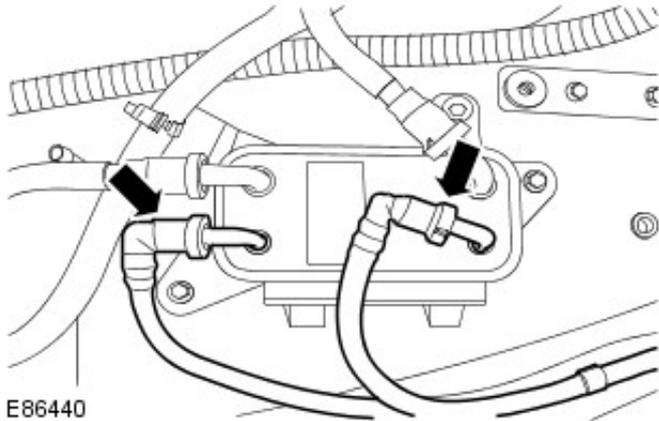

E86440

9. Connect the oil thermostat coolant hose.

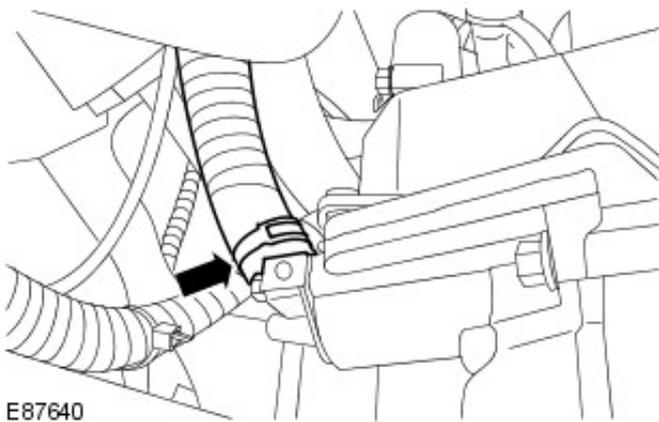

E87640

10. CAUTIONS:

 Engine coolant will damage the paint finished surfaces. If spilt, immediately remove the coolant and clean the area with water.

 Anti-freeze concentration must be maintained at 50%.

Fill the cooling system expansion tank until the coolant level becomes static with in the "COLD FILL RANGE".

11. Tighten the cooling system bleed screw.

12. Install the coolant expansion tank cap.

13. CAUTIONS:

 Make sure the coolant level remains above the "COLD FILL