


FRONT HUB ASSEMBLY

Service repair no - 60.25.01.

Remove

1. Loosen front wheel nuts, jack up vehicle and lower onto axle stands and remove road wheel.
2. Release brake hose clips and remove brake caliper and brake disc shield bolts. Secure to one side.
3. Lever off dust cap.
4. Remove circlip and drive shaft shim from driveshaft.
5. Remove 5 bolts and withdraw driving member and joint washer.
6. Bend back lock washer tabs.
7. Remove locknut and lock washer.
8. Remove hub adjusting nut.
9. Remove spacing washer.
10. Remove hub and brake disc assembly complete with bearings.

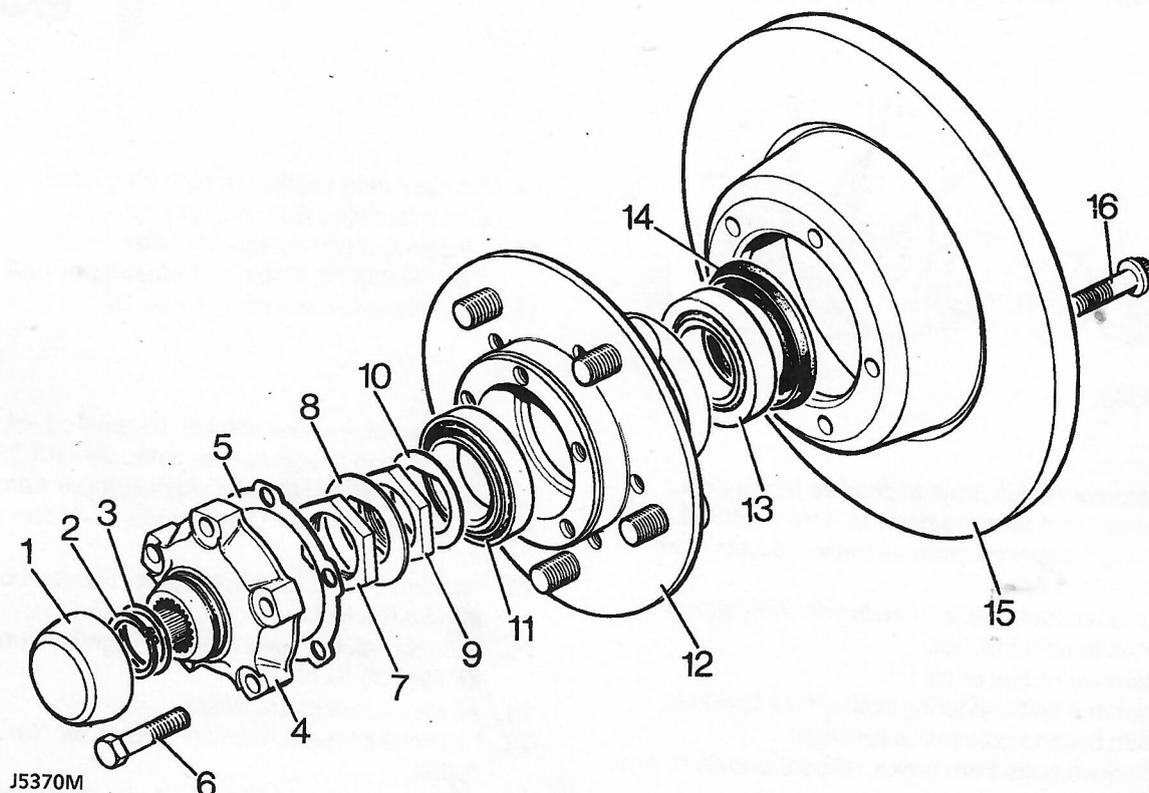

HUB COMPONENTS

- | | |
|--|--|
| <ol style="list-style-type: none"> 1. Dust cap. 2. Drive shaft circlip. 3. Drive shaft shim. 4. Drive member. 5. Drive member joint washer. 6. Drive member retaining bolt. 7. Lock nut. 8. Lock washer. | <ol style="list-style-type: none"> 9. Hub adjusting nut. 10. Spacing washer. 11. Outer bearing. 12. Hub. 13. Inner bearing. 14. Grease seal. 15. Brake disc 16. Disc retaining bolt. |
|--|--|