

New PCV

Oil leaking all in  
this area, Cyl 1-4







Where does this  
hose connect?





Oil leaking in this area.

Leaking gasket underneath. Valved cover torqued down