

CONTROL COMPONENTS

PASSENGER SIDE TEMPERATURE BLEND DOOR ACTUATOR – RHD AWD [G424642]


REMOVAL AND INSTALLATION

80.10.38	MOTOR – TEMPERATURE CONTROL – PASSENGERS SIDE – RENEW	RIGHT HAND DRIVE	0.30	USED WITHINS
----------	---	---------------------	------	--------------

REMOVAL

1. Remove the glove compartment. For additional information, refer to: [Instrument Panel Console](#) (501-12 Instrument Panel and Console, Removal and Installation).

2.

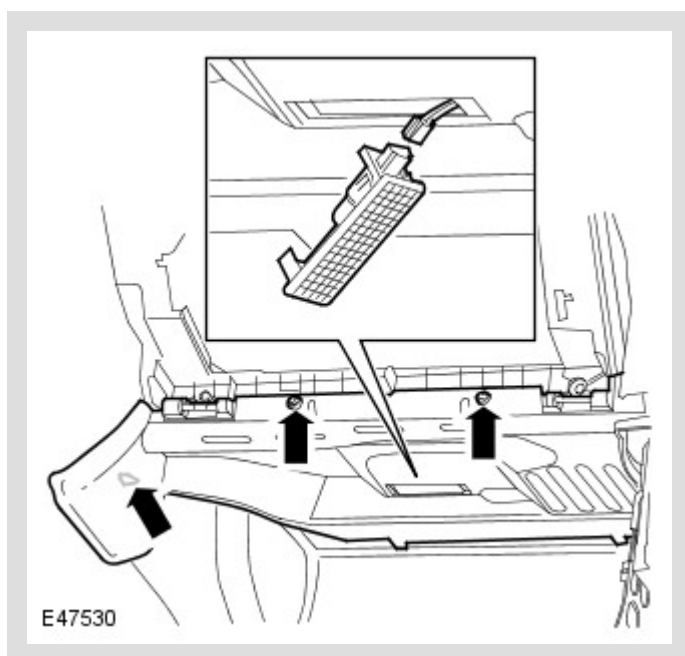


Remove the passenger side closing trim panel.

Release the clip.

Remove the 2 screws.

Disconnect the electrical connector.


3.

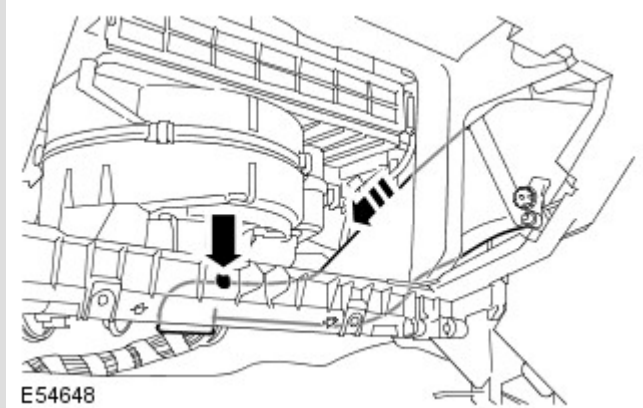

Remove the passenger side footwell duct.

Remove the clip.


4.

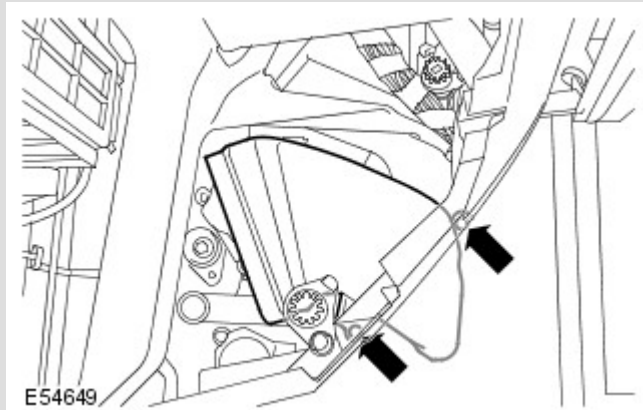

Remove the passenger side footwell duct elbow.

Remove the 2 Torx screws.

5.

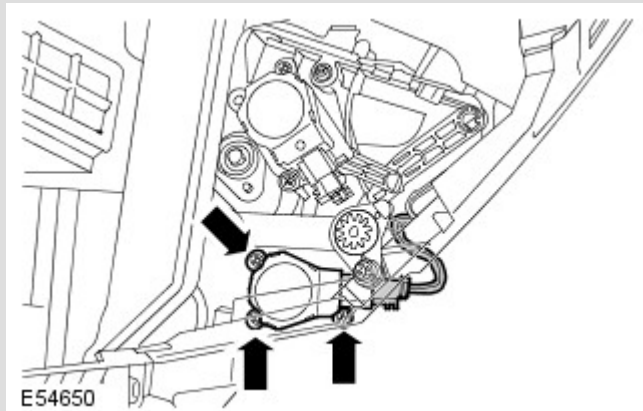

Remove the temperature blend door actuator.

Disconnect the electrical connector.

Remove the 2 screws.

INSTALLATION

1. Install the temperature blend door actuator.

Tighten the screws.

Connect the electrical connector.

2. Install the passenger side footwell duct elbow.

Tighten the screws.

3. Install the passenger side footwell duct.

Install the clip.

4. Install the passenger side closing trim panel.

Install the interior lamp.

Connect the electrical connector.

Secure the clip.

5. Install the glove compartment. For additional information, refer to: [Instrument Panel Console](#) (501-12 Instrument Panel and Console, Removal and Installation).