

PUBLISHED: 11-MAY-2011

2011.0 DISCOVERY 4 / LR4 (LA), 412-02B

AUXILIARY HEATING

AUXILIARY HEATER REMOTE TRANSMITTER PROGRAMMING (G1390228)

GENERAL PROCEDURES

ACTIVATION

 NOTE:

A second or third hand held transmitter can be programmed using this method.

1.


 NOTES:

- Use a coin or similar implement to remove and install the battery cover.
- Make sure that correct battery polarity is maintained.




Remove and install the transmitter battery.


2.

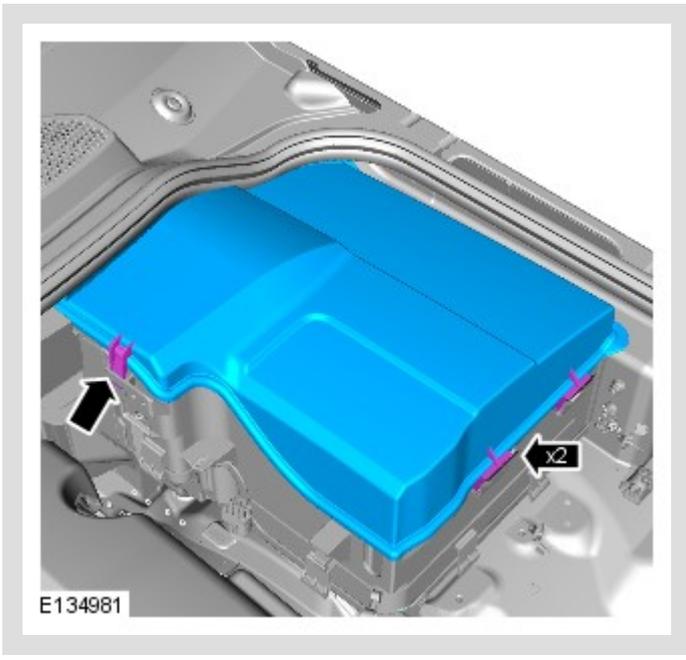

3.

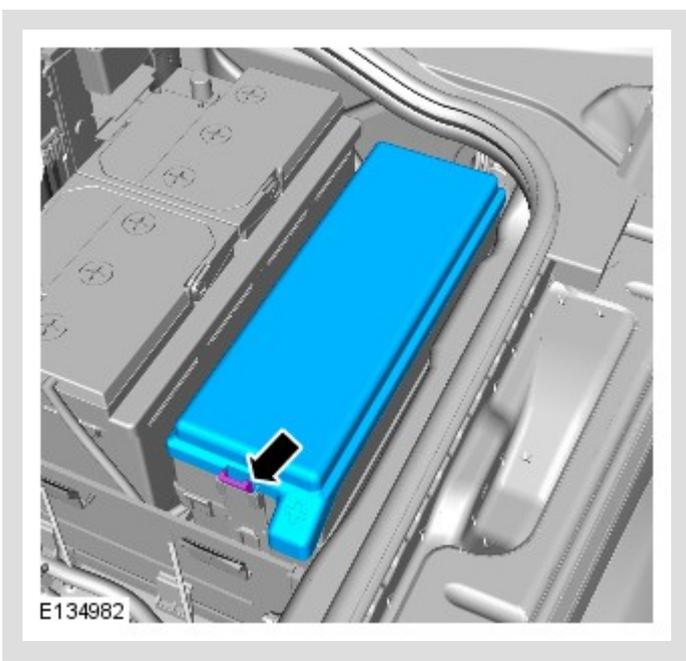

4.

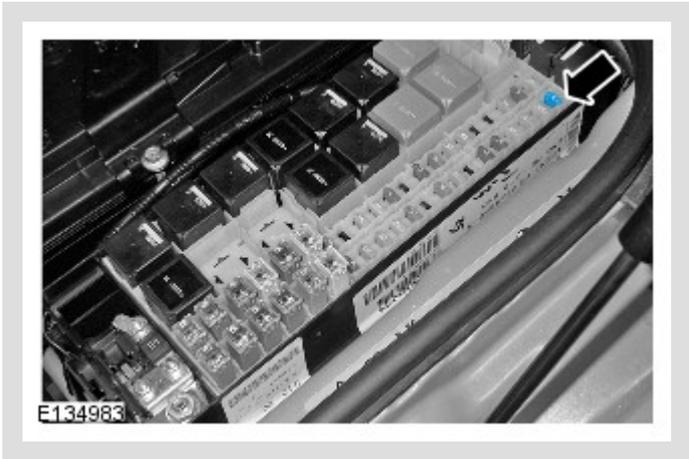

Remove fuse 2 (5 Amp) from the battery junction box (BJB).

5.

 NOTE:

This completes the programming procedure.



Install fuse 2 (5 Amp), and within 5 seconds press the OFF button on the transmitter for at least 1 second.

6.

To confirm whether the programming procedure has completed correctly, push the off button. If a continuous red light is displayed on the transmitter, the programming procedure was successful. If a flashing red light is displayed, the procedure was unsuccessful, or the transmitter is not in range. In this case, make sure the transmitter is within the recommended range and repeat the above procedure from step 4.

bWrvbGxhbmQYWE7MjAyMy0xM50yNlQxNzoxMDoxM54wMDZaOzgyLj3LjM2LjQ1Ow==