


## Engine - ID4 2.2L Diesel - Oil Pan

### Removal and Installation

#### Removal


1. Raise the vehicle on lift.
2. Drain the engine oil.  
For additional information, refer to: [Engine Oil Draining and Filling](#) (303-01 Engine - ID4 2.2L Diesel, General Procedures).

3. Remove the 16 oil pan bolts.

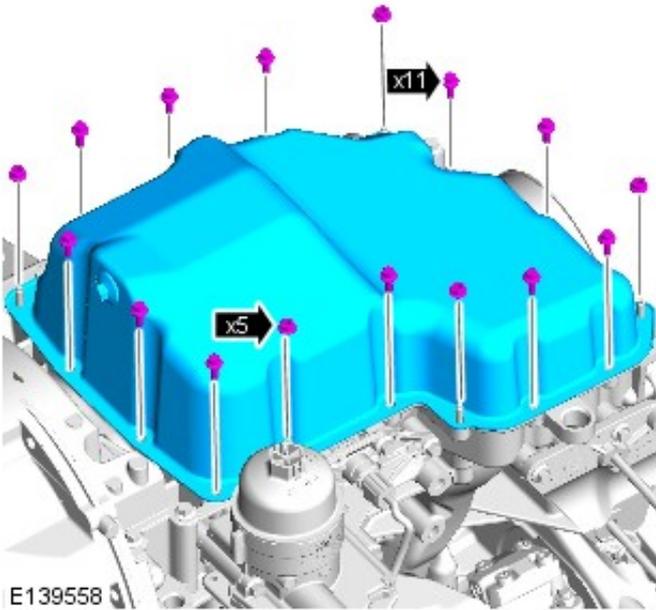

4.  **CAUTION: CAUTION:** Avoid damage to the oil pan mating face of the cylinder block. Failure to follow this instruction may cause damage to the vehicle.

Remove the engine oil pan.

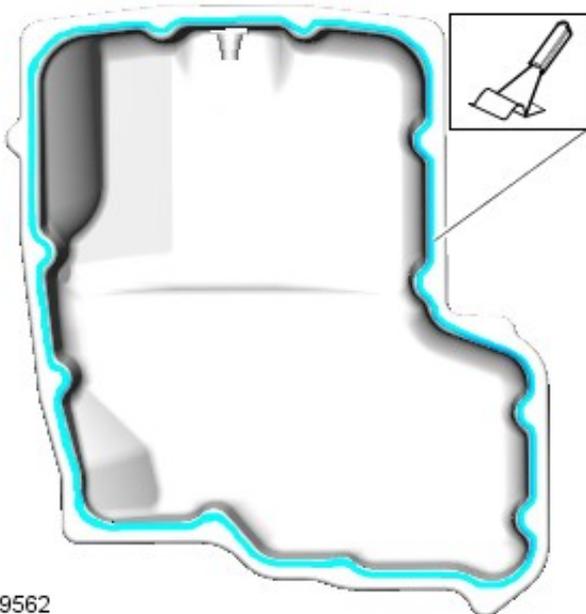

5.  **CAUTION: CAUTION:** Avoid damage to the oil pan mating face of the cylinder block. Failure to follow this instruction may cause damage to the vehicle.

Remove the sealant from the engine.

#### Installation

1. **NOTE:** Clean the cylinder block mating faces.