



10. Disconnect reversing lamp switch connector.



11. Remove the reversing lamp switch.

- Remove and discard the O-ring seal.



Installation

1. Install the reversing lamp switch.

- Install a new O-ring seal.
- Tighten to 20 Nm (15 lb/ft).



2. Connect the reversing lamp switch electrical connector.

3. Install the transmission cover panel.

- Install the screws.

4. Install the gaiter with the selector levers attached.

- Install the selector levers.