


# Electronic Engine Controls - ID4 2.2L Diesel - Heated Oxygen Sensor (H02S)

Removal and Installation

## Special Tool(s)


 <p>310-121</p> <p>E53465</p>	<p>Wrench, H02S</p> <p>310-121</p>
---	------------------------------------

## Removal

NOTE: Removal steps in this procedure may contain installation details.

1. For additional information, refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).

2.

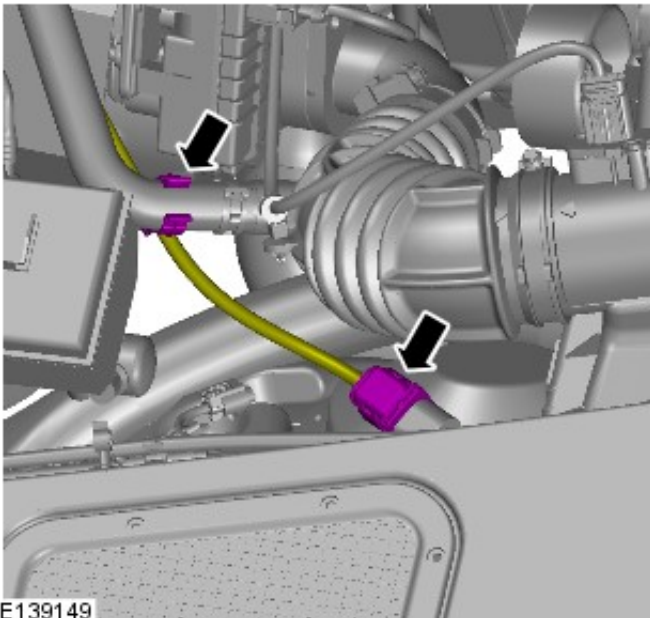

3. Torque: 48Nm Tool: 310-121 (Wrench, H02S)

