


# Handles, Locks, Latches and Entry Systems - Hood Latch

## Removal and Installation

### Removal

1. Open hood.
2. Mark position of guide plate and lock to hood platform.
3. Remove 8 screws securing grille.
4. Remove grille.
5. Remove 2 bolts securing guide plate and lock.
6. Remove guide plate.
7. Release spring securing lock to hood platform.
8. Slacken clamping bolt securing hood release cable.
9. Remove lock.

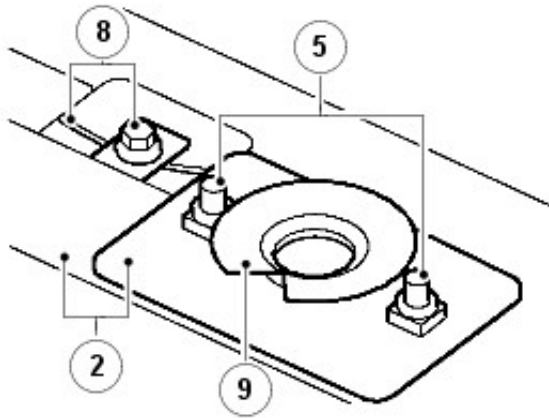

J6371

### Installation

1. Fit spring between lock and hood platform.
2. Position lock and guide plate to hood platform and nip up bolts.
3. Position guide plate and lock to position marks and tighten bolts to 10 Nm (7 lbf/ft).
4. Fit cable to lock and tighten clamping bolt.
5. Check operation of release cable and adjust if necessary.
6. Fit grille and tighten securing screws.
7. Close hood.