

# Anti-Lock Control - Stability Assist - Yaw Rate Sensor


Removal and Installation

## Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: Instrument Panel Speaker (415-03, Removal and Installation).

2.

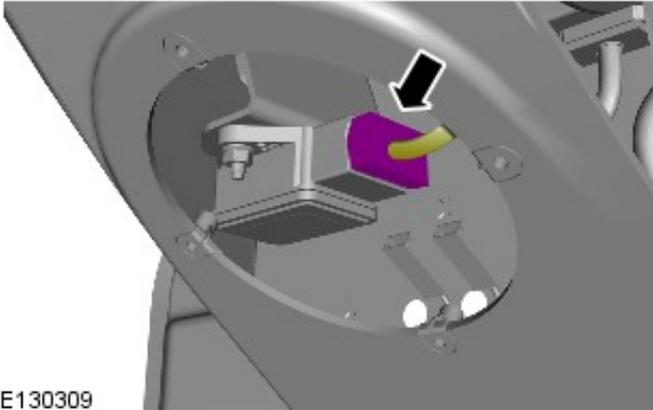

3. Torque: 7 Nm

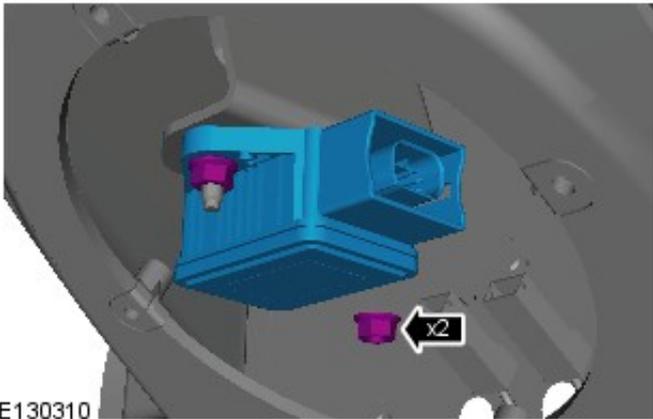

## Installation

1. To install, reverse the removal procedure.