


# Air Suspension

## Extended mode

If the vehicle is grounded and traction control is induced, the system raises the vehicle by 35 mm (1.4 in.) to clear the obstruction. Extended mode is activated automatically and cannot be selected manually.

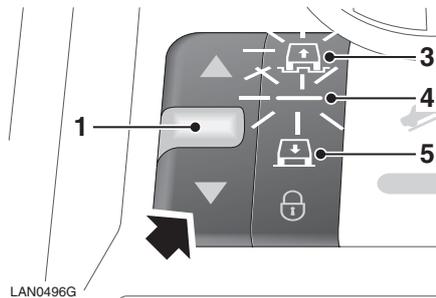

When Extended mode is activated, indicator (3) will flash if the suspension is above Off-road height. Indicators (3) and (4) will flash if the suspension is between Off-road and On-road heights. Indicators (4) and (5) will flash if the suspension is between On-road and Access heights. A message will be displayed on the message centre.

To exit Extended mode, either press the raise/lower switch (1) briefly up or down, or drive the vehicle at a speed greater than 5 km/h (3 mph) for 30 seconds.

## Additional lift whilst in extended mode

When Extended mode has been invoked and the automatic lifting of the vehicle has been completed, the driver can request an additional lift in order to clear the obstacle. This can be particularly useful when Extended mode has been invoked on soft surfaces.

To request additional lifting wait for the raising indicator (2) to extinguish, then press and hold the switch (1) in the up direction for 3 seconds while also pressing the brake pedal. A chime will sound to confirm that the request has been accepted. The raising indicator (2) will be illuminated while the vehicle is being lifted.

## Suspension freeze

If the system is attempting to change the suspension height and it detects that the suspension is prevented from moving, the system will freeze all movements.

This can be caused by attempting to lower the vehicle onto an obstacle or attempting to lift the vehicle against an obstruction.

The symbols behave in the same way as described in Extended mode and the same message will be displayed on the message centre. As in Extended mode, to exit this freeze state, either press the switch (1) up or down, or drive the vehicle at a speed greater than 20 km/h (12 mph).