

# Locks & Alarm

## ENGINE IMMOBILISATION

Engine immobilisation is an important aspect of the security system and includes a feature known as 'passive immobilisation'. This is designed to safeguard the vehicle from theft, should the driver forget to lock the doors and prevents the engine from being started unless the GENUINE handset key is inserted into the starter switch. Engine immobilisation is automatic whenever any of the following conditions occur.

- The vehicle is locked using handset or key.
- Thirty seconds after the starter switch has been turned off AND the driver's door opened.
- Five minutes after the starter switch is turned off, or the alarm system is disarmed.

**NOTE:** The engine will be re-mobilised automatically whenever the genuine handset key is inserted into the starter switch and turned to position 'II'.


## Emergency key access

If the handset is damaged, or fails to operate, the engine can be re-mobilised by using the key to enter a unique four number emergency key access code. The code is recorded on the Security Information card and is entered as follows:


### IMPORTANT INFORMATION

When entering a code:

- ENSURE each key movement is carried out with care and precision and turned to the full extent of its travel.
- After turning the key to either the lock or unlock positions, make sure it is FULLY returned to the centre (vertical) position.
- An interval of 10 seconds or more between key turns, or the key being held in a locked or unlocked position for 5 seconds or more will cancel an entry attempt, in which case you must start again with operation 1.

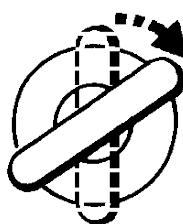

**1.** Ensure that all doors are closed, then using the key turn the driver's door lock to the UNLOCK position (towards the front of the car) and hold in this position for at least 5 seconds until the alarm sounder sounds once). Then return the key to the centre position. It is now possible to use the key to enter the separate numerical values of the four numbers that make up the emergency key access code.

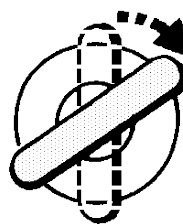

**2. Enter the FIRST number of the code.** If the first number is 4, turn the key (towards the front of the car) to the UNLOCK position 4 times. Ensure the key is FULLY returned to the centre position after each turn.