


Emergency towing

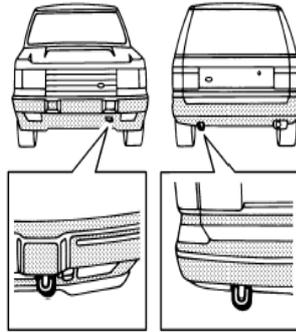

P0132

Front towing eye

Use **ONLY** when the vehicle is to be towed with **ALL** four wheels on the ground. (see 'Towing the vehicle on four-wheels').

Rear towing eye

Use **ONLY** when towing another vehicle.

WARNING

If transfer neutral has been selected, it is essential to remove fuse 11 and press the transfer 'Hi/Lo' switch (to re-select high or low range) before leaving the vehicle stationary.

Towing the vehicle on four-wheels

If it is necessary to recover the vehicle by towing on all four wheels, select transfer neutral as follows:

- With the starter key removed, insert a fuse (5 amps or greater) in fuse position 11 in the right hand seat fuse box. Insert key and turn the starter switch on; the transfer box will automatically select neutral (wait until the message centre displays 'TRANSFER NEUTRAL'), then turn the starter switch off.
- Turn the starter switch to position 'I' to unlock the steering and leave in this position while the vehicle is being towed.
- To re-engage HIGH or LOW range after towing, turn the starter switch off, remove the fuse from position 11, then turn the starter switch on and press the range change switch (manual gearbox) - the transfer box will engage the HIGH or LOW gear range.

NOTE: If, due to an accident or electrical fault, it is considered unsafe to turn the starter switch, the battery must be disconnected.