


HARNES - FRONT DOOR

Service repair no - 86.70.65

Remove

1. Remove plastic sheet. See CHASSIS AND BODY, Repair.
2. Disconnect window lift motor multiplug.

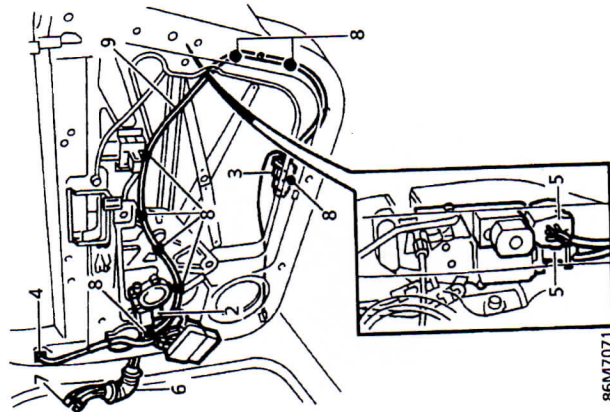


3. Disconnect puddle lamp multiplug.
4. Disconnect door mirror multiplug.
5. Disconnect 2 door latch motor multipugs.
6. Release door to body harness sheath at both ends.
7. Release 2 door harness connectors from body and disconnect.
8. Release 8 clips securing door harness.
9. Remove harness from door.

Refit

10. Reverse removal procedure.

6. Release switch pack from fascia.

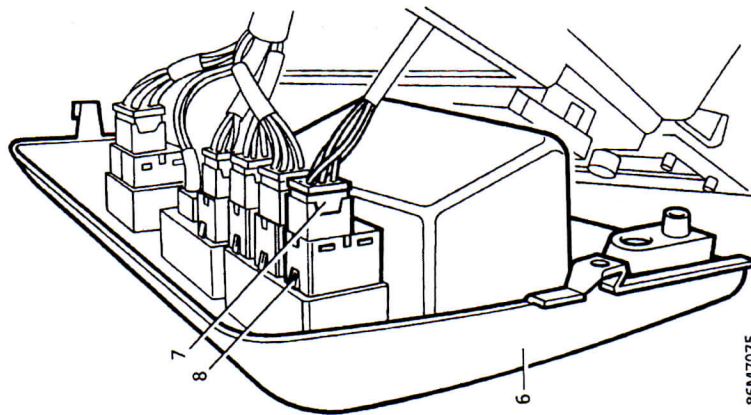

7. Disconnect multiplug from relevant switch.
8. Release clips securing switch to switch pack. Remove switch.

Refit

9. Reverse removal procedure.

FRONT FOG LAMP


Service repair no - 86.40.96

Remove


1. Raise the vehicle.

WARNING: Support on safety stands.

2. Disconnect multiplug.

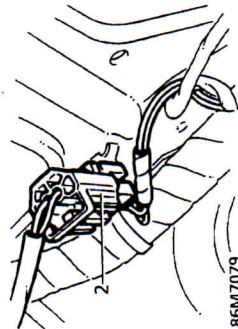

3. Disconnect 2 breather tubes.

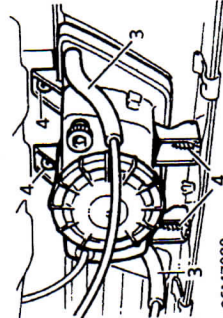

4. Remove 4 screws securing fog lamp to bumper.
5. Remove fog lamp assembly.

Refit


6. Reverse removal procedure.

FRONT SPEAKER

Service repair no - 86.50.15

Remove

1. Remove front door trim casing. See CHASSIS AND BODY, Repair.
2. Remove 4 screws securing speaker.

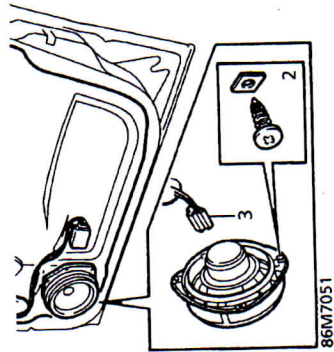

3. Release speaker. Disconnect multiplug. Remove speaker.

Refit

4. Reverse removal procedure.