

## Installation

1. Connect sensor harness multiplug.
2. Position sensor harness and secure to inner wing with clip.
3. Raise vehicle.
4. Secure harness to inner wing and brake pipe with clips.
5. Apply grease to sensor.



CAUTION: Ensure sensors are thoroughly cleaned before fitting.

6. Carefully install sensor to hub assembly.
7. Lower vehicle.