



7. Remove the starter motor.

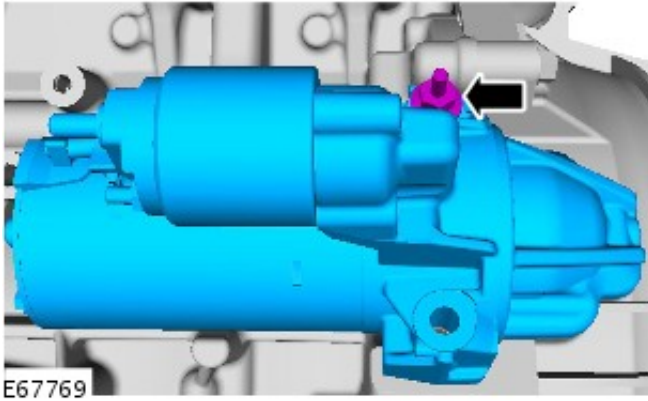


### Installation

1. Install the starter motor.

- Tighten to 35 Nm (26 lb.ft).

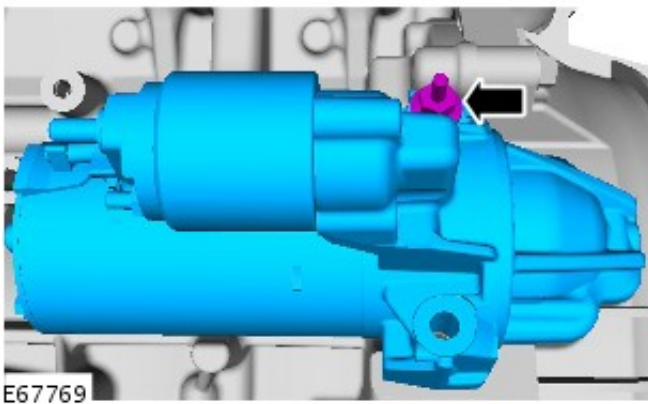

2. Tighten to 35 Nm (26 lb.ft).

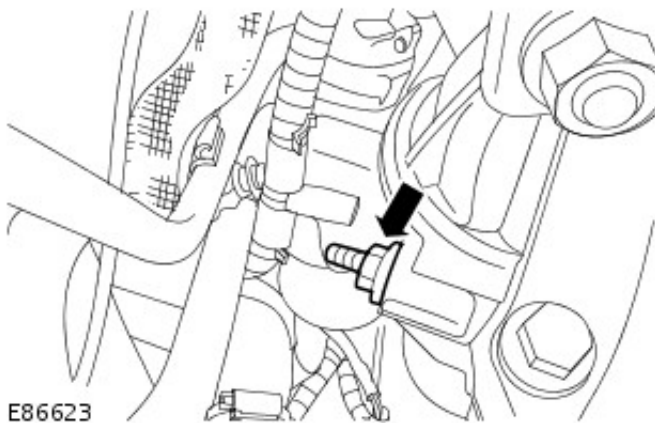

3. Secure the 2 battery positive cables and the switch lead to