


Interior Trim and Ornamentation - Steering Column Shrouds


Removal and Installation

Removal


1. Remove the steering wheel center pad.

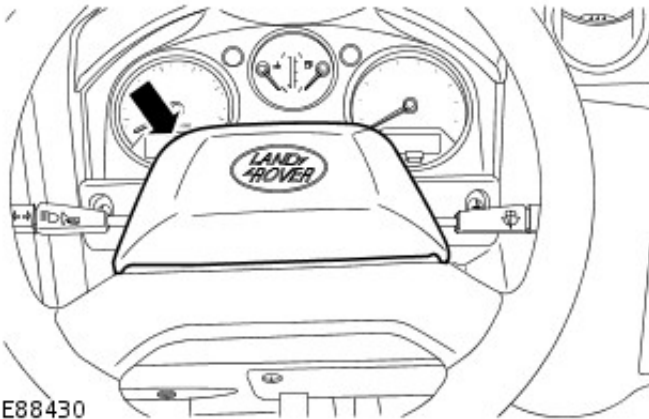

2. Remove the instrument cluster lower finisher.
 - Remove the 2 screws.

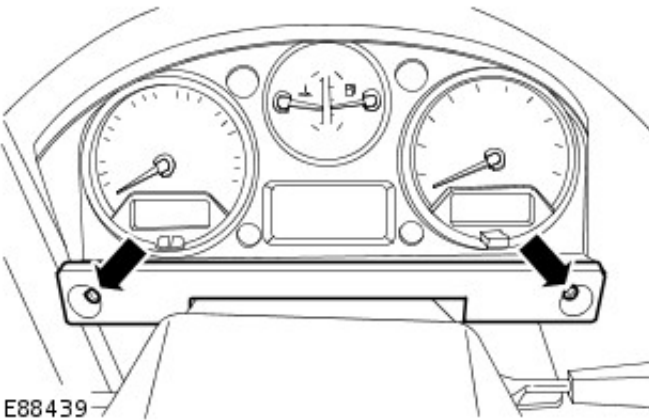

3. Release the 3 grommets from the steering column shrouds.

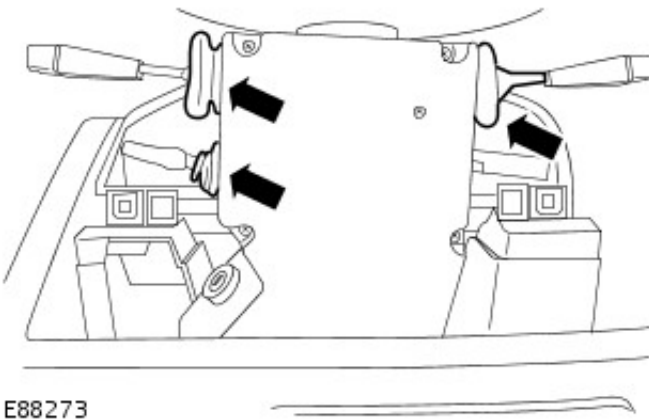

4. Remove the grommet.

