


Heating and Ventilation - Heater Control Valve

Removal and Installation

Removal

1. Remove the bonnet switch.


- Disconnect the bonnet switch electrical connector.

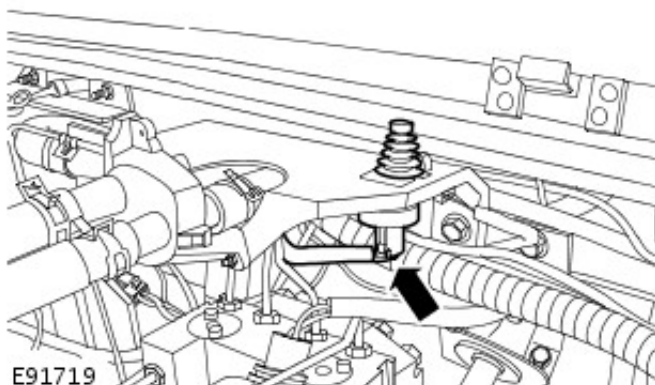

2. **NOTE:** Note the fitted position of the cable prior to removal.


Disconnect the heater control valve control cable.

- Release the clip.

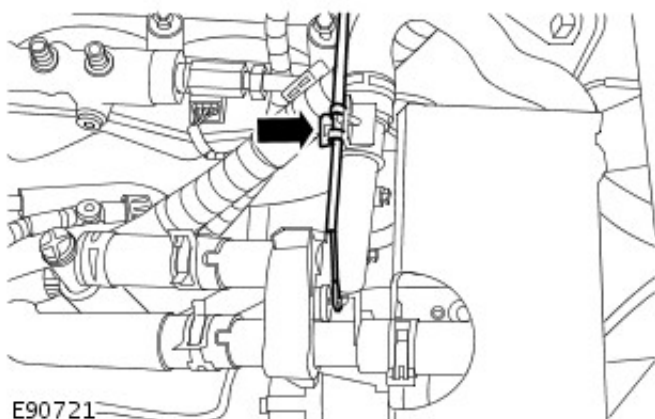

3. Disconnect the heater core feed hose.

- Using a suitable pipe clamp, clamp the hose.
- Release the clip.

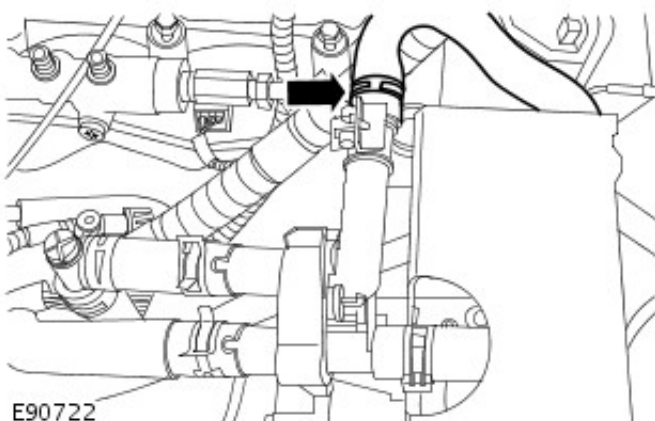

4. Disconnect the heater control valve feed and return hoses.

- Using a suitable pipe clamp, clamp the hoses.
- Release the 2 clips.

