


- Operate the hand pressure pump special tool until fuel starts to flow through the clear plastic pipe and the special tool becomes firm.

3. Remove the special tool.

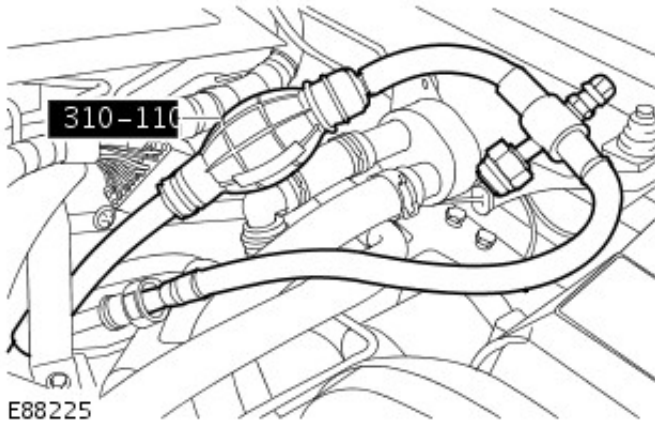

4. Connect the fuel injection pump supply line.
For additional information, refer to: [Quick Release Coupling](#) (310-00 Fuel System - General Information, General Procedures).

- Remove the absorbent cloth.