


E88190


8. Remove the 4 nuts from the rear driveshaft to transfer case.

- Mark the position of the driveshaft in relation to the drive pinion flange.

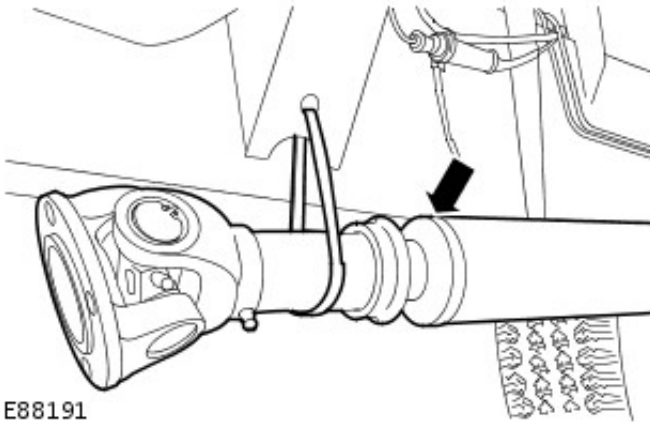


E88191

9. Using a suitable tie strap, secure the rear driveshaft to the chassis.

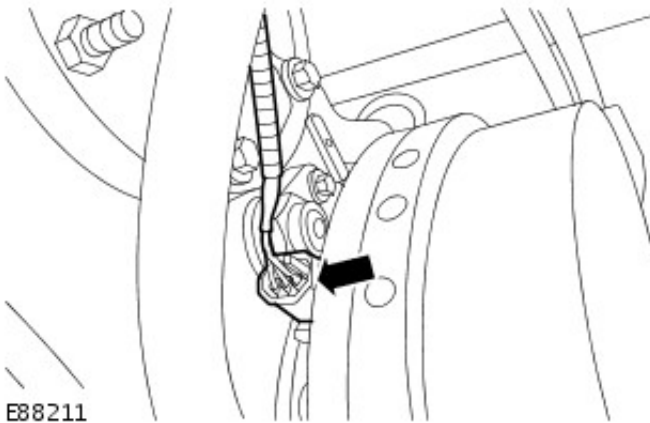

E88211

10. Disconnect the electronic speedometer electrical connector from the transfer case.

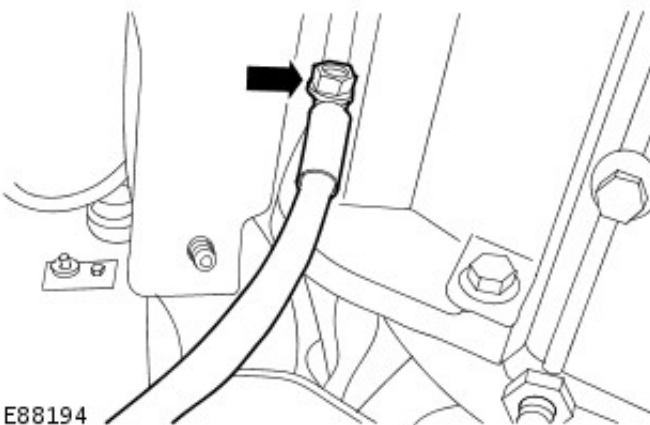

E88194

11. Disconnect the LH earth cable from the transfer case.

- Remove the nut.

12. Disconnect the RH earth cables from the transfer case.