


Anti-Lock Control - Traction Control - Rear Wheel Speed Sensor

Removal and Installation

Removal

⚠ CAUTION: The sensor is not to be replaced without first removing the sensor, cleaning it, repositioning and retesting.


1. Raise vehicle on a 2 post ramp.
2. Remove both rear wheels.
3. Remove 3 bolts securing each brake disc backplate to hub assemblies.
4. Remove both back plates.
5. Remove 2 cable ties securing sensor harness to outer ends of axle.

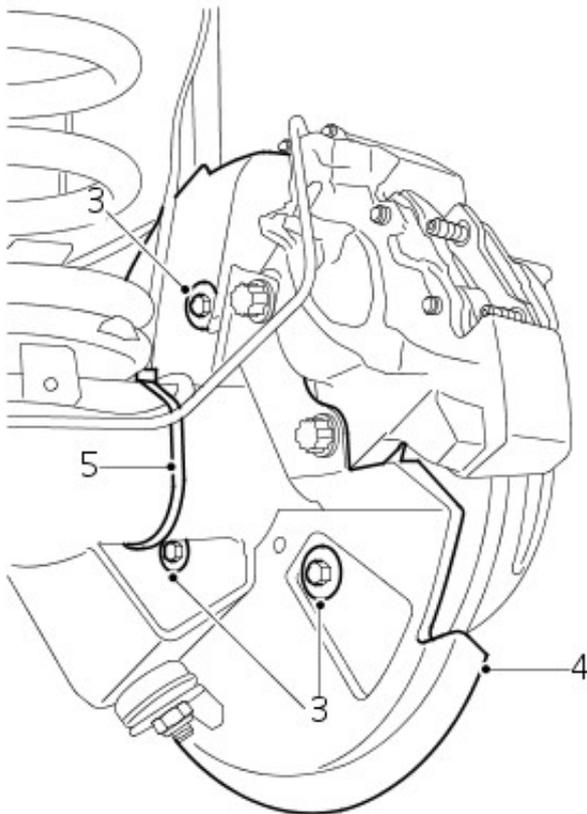

M700857

⚠ CAUTION: The sensor is not to be replaced without first removing the sensor, cleaning it, repositioning and retesting.

Carefully prise both sensors from hub assemblies.

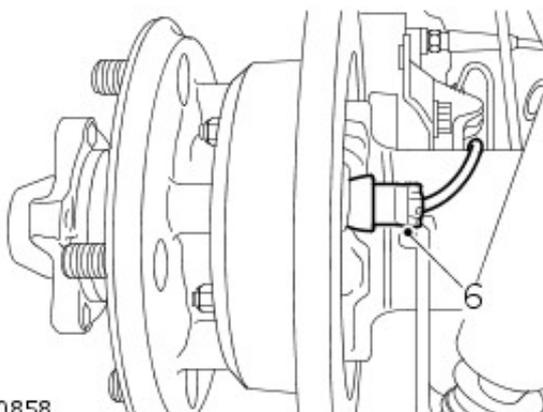

M700858

7. Release 4 clips securing sensor harness to axle.