



3.  CAUTION: Make sure that the area around the component is clean and free of foreign material.

Remove the fuel filter.

- Position a container to collect the fluid spillage.

Installation

1.  CAUTION: Clean the component mating faces.

Install the fuel filter.

- Remove the container.

2. Install the fuel filter cover.

- Tighten the clip.

3. Bleed the fuel system.

For additional information, refer to: [Low-Pressure Fuel System Bleeding](#) (310-00 Fuel System - General Information, General Procedures).