



5.  **CAUTION:** Make sure no damage to the fuel rail the mating faces occurs. Failure to follow this instruction may result in damage to the components.

Remove and discard the gasket.



E66949

Installation

1.  **CAUTION:** Make sure no damage to the fuel rail the mating faces occurs. Failure to follow this instruction may result in damage to the components.

Install a new gasket.

- Clean the component mating faces.



E66949


2. Install a new fuel pressure relief valve.

- Tighten to 30 Nm (22 lb.ft).



E66991

3. Draw a line on the corner of the fuel pressure relief valve (1) and on the side of the fuel rail (2).

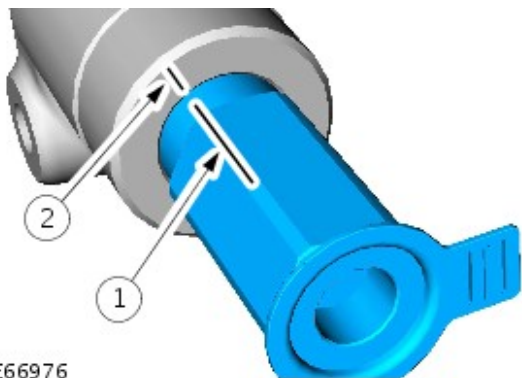

E66976

4. Draw a line (3) 3 mm (0.11 inches) from line (2).