



5. Remove the 6 screws.

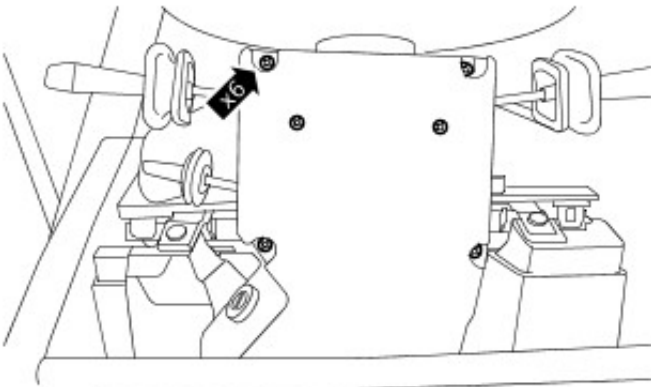


E88274

6. Remove the upper steering column shroud.

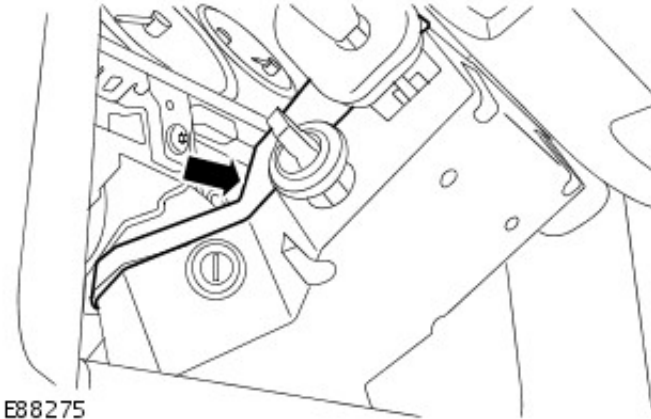

E88275

7. Remove the lower steering column shroud.

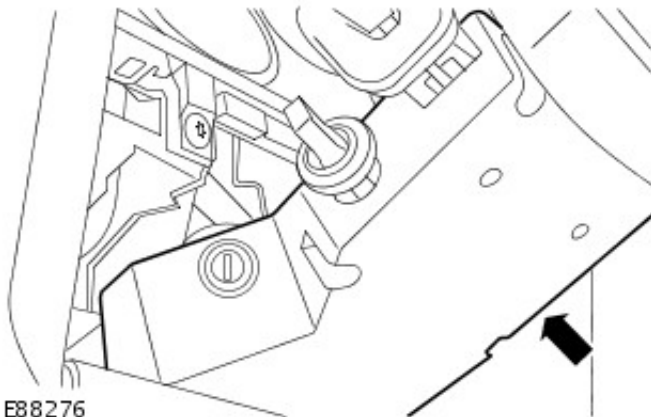


E88276

### Installation

1. To install, reverse the removal procedure.

- Tighten to 2 Nm (1 lb.ft).

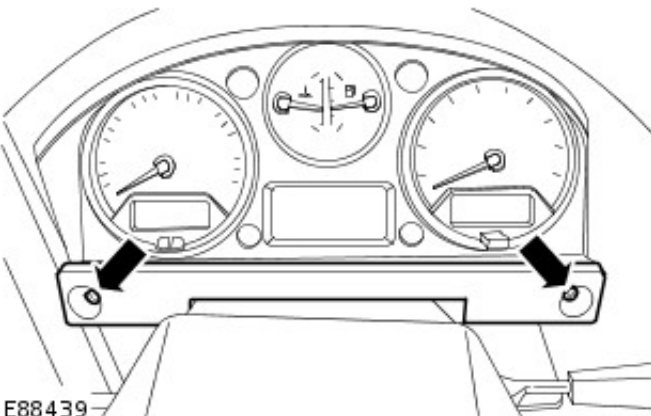

E88439