


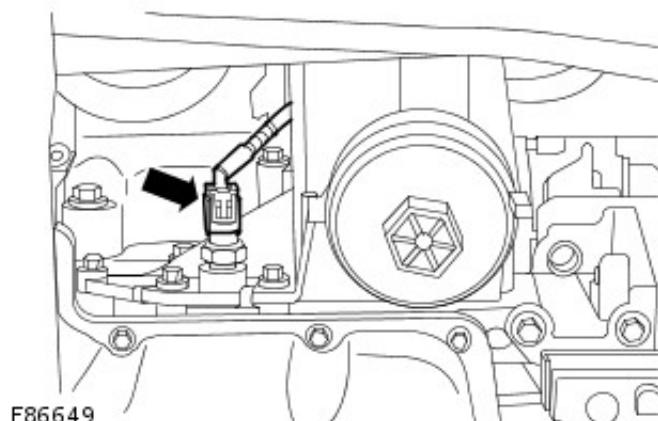
Engine - 2.4L Duratorq-TDCi HPCR (103kW/140PS) - Puma - Oil Filter Housing

In-vehicle Repair

Removal


1. Disconnect the battery ground cable.
For additional information, refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
2.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.
3. Drain the cooling system.
For additional information, refer to: [Cooling System Draining, Filling and Bleeding](#) (303-03 Engine Cooling - 2.4L Duratorq-TDCi HPCR (103kW/140PS) - Puma, General Procedures).
4. Disconnect the engine oil pressure (EOP) sensor electrical connector.




E86649

5. Disconnect the coolant hose from the engine oil cooler.
 - Release the clip.

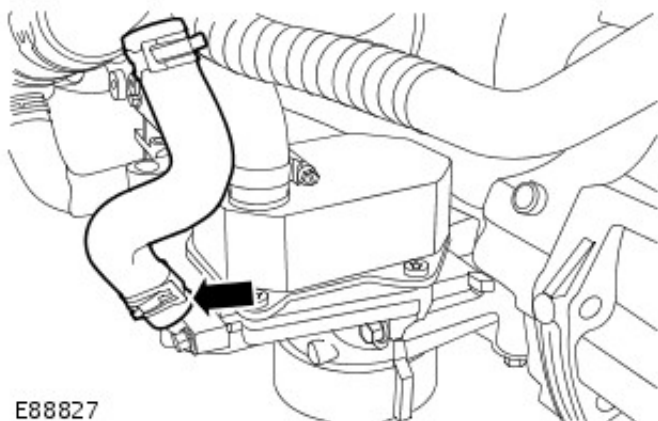

E88827

6. Disconnect the coolant hose.
 - Release the clip.

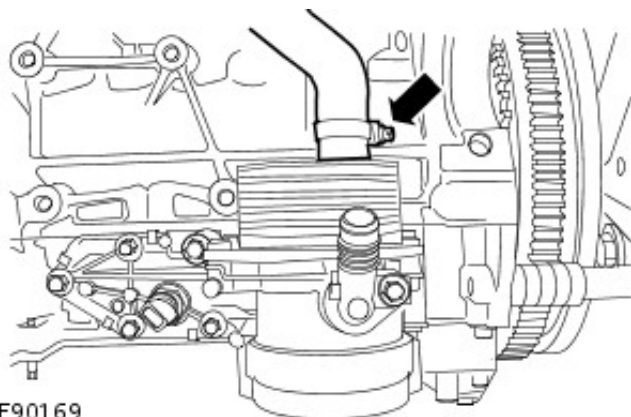

E90169