

new blanking caps.

Remove the oil filter housing assembly.

- Remove the 6 bolts.
- Remove and discard the gasket.

E90172


Installation

1. NOTE: Remove and discard the blanking caps.

- NOTE: Clean the component mating faces.
- NOTE: Install a new gasket.

To install, reverse the removal procedure.

- Tighten the bolts to 23 Nm (17 lb.ft).

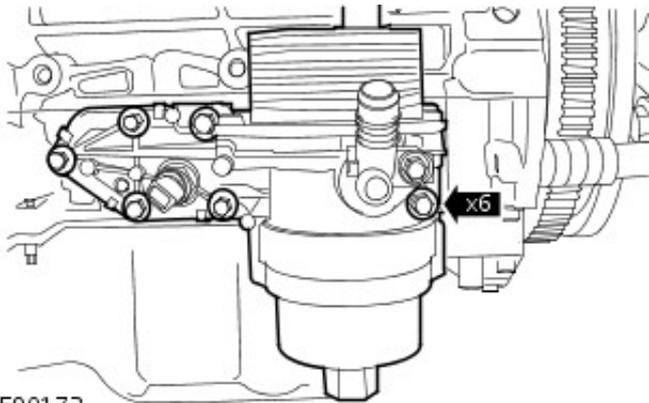

E90172

2. Connect the battery ground cable.

For additional information, refer to: [Battery Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).