

Anti-Lock Control - Traction Control - Front Wheel Speed Sensor

Removal and Installation

Removal

 **CAUTION:** The sensor is not to be replaced without first removing the sensor, cleaning it, repositioning and retesting.


1. Raise vehicle on a 2 post ramp.

2.  **CAUTION:** The sensor is not to be replaced without first removing the sensor, cleaning it, repositioning and retesting.

Carefully prise ABS sensor from front hub.

3. Release clip securing ABS sensor harness to brake pipe.

4. Release clip securing ABS sensor harness to inner wing.

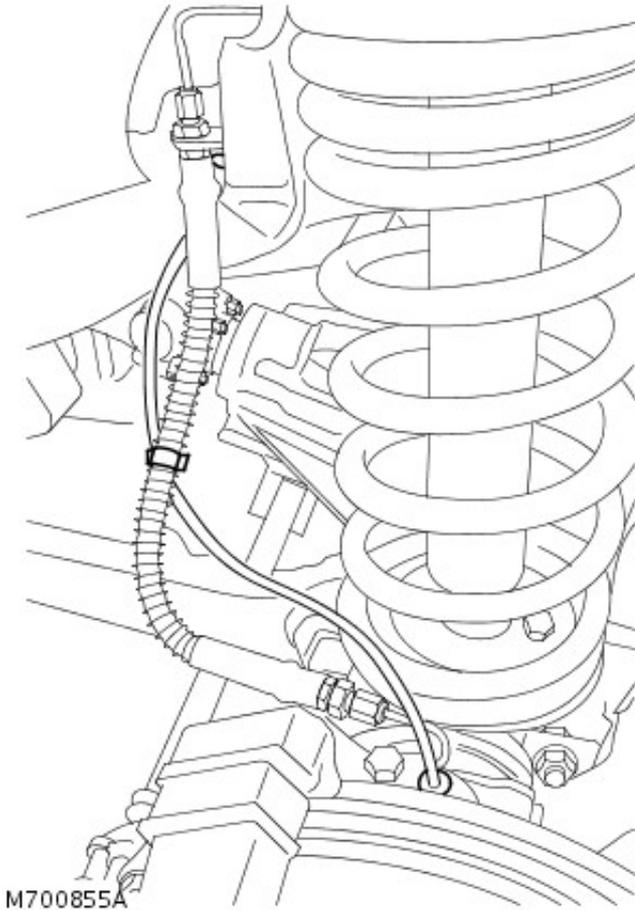

5. Lower vehicle.

6. Release second clip securing ABS harness to inner wing.

7. Disconnect sensor harness multiplug.

8. Remove sensor and harness.

