



22. Remove the parking brake assembly and the cable.

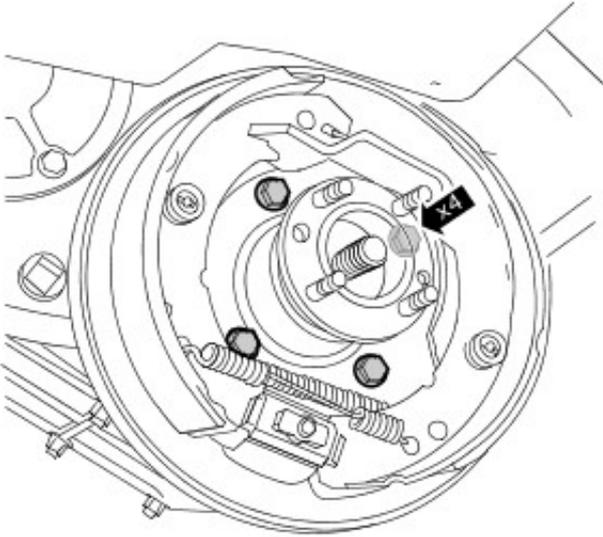


E101489

33. Disconnect the electronic speedometer drive electrical connector from the transfer gearbox.

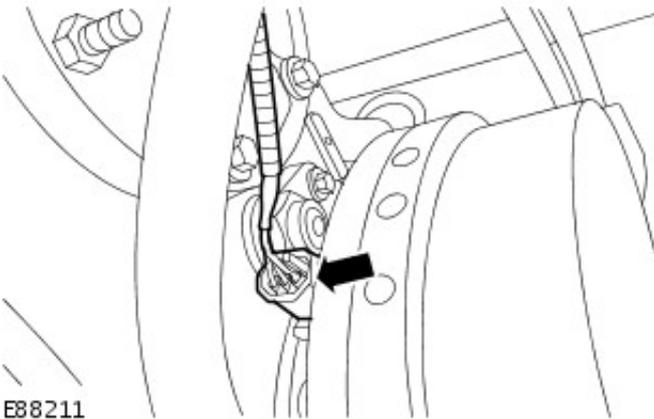


E88211

34. Remove the nut and disconnect the LH earth cable from the transfer gearbox.

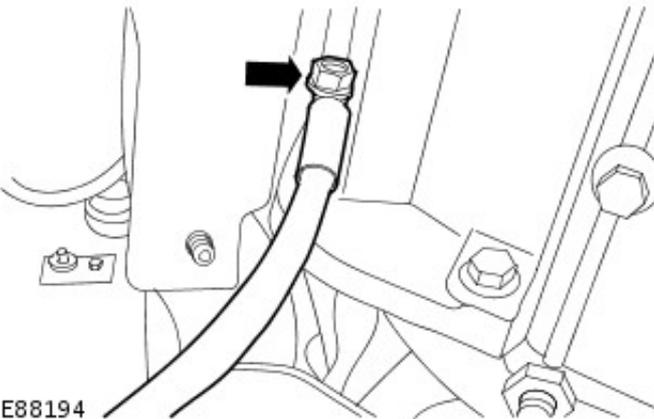

E88194

35. Remove the bolt securing the RH earth cables from the transfer gearbox.

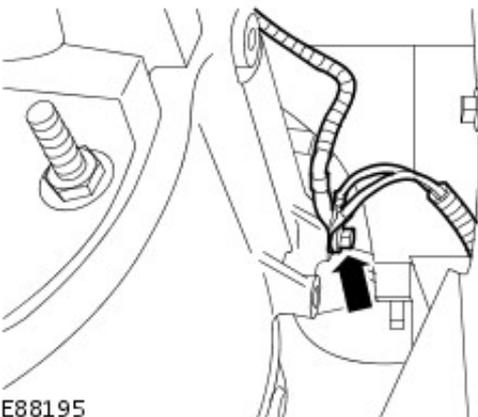

E88195