


# Exterior Lighting - Headlamp Leveling Motor

Removal and Installation

## Removal

1. Remove headlamp assembly.  
For additional information, refer to: [Headlamp Assembly \(417-01 Exterior Lighting, Removal and Installation\)](#).
2. Disconnect headlamp leveling motor harness plug.
3. Rotate headlamp leveling motor anti-clockwise to release retaining lugs from mounting bracket on headlamp body.
4. Release headlamp leveling motor spindle from retaining slot on headlamp bezel and withdraw headlamp leveling motor from mounting bracket.

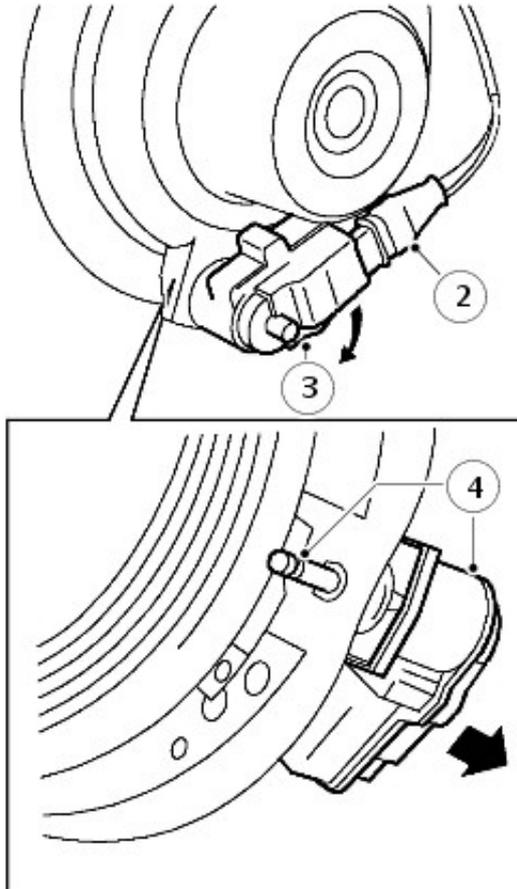

J6447

## Installation

1. Instal headlamp leveling motor into mounting bracket and locate motor spindle into slot in headlamp bezel.
2. Press in headlamp leveling motor and rotate clockwise to engage retaining lugs behind mounting bracket.
3. Connect headlamp leveling motor harness plug.
4. Fit headlamp assembly.  
For additional information, refer to: [Headlamp Assembly \(417-01 Exterior Lighting, Removal and Installation\)](#).