


# Steering Column Switches - Ignition Switch

Removal and Installation

## Removal

1. Remove instrument cluster.  
For additional information, refer to: Instrument Cluster (413-01, Removal and Installation) / [Instrument Cluster](#) (413-01 Instrument Cluster, Removal and Installation).
2. Remove steering column shroud.  
For additional information, refer to: Steering Column Shrouds (501-05 Interior Trim and Ornamentation, Removal and Installation) / [Steering Column Shrouds](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. Note position of harness leads on back of ignition switch and disconnect harness leads. If fitted, remove anti theft system passive coil from switch.

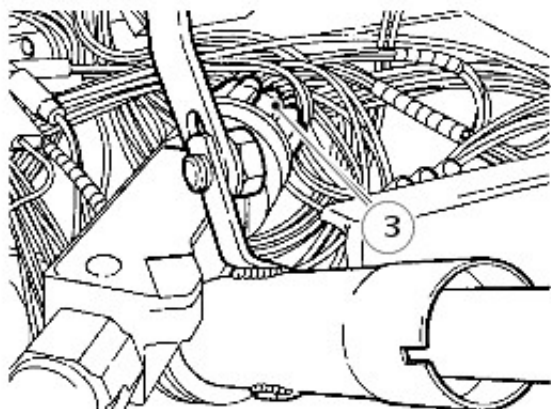

J6438

4. Remove single screw and withdraw ignition switch from steering column lock.

## Installation

1. Fit new switch in steering column lock.
2. Connect harness leads to ignition switch.
3. If applicable, fit anti theft system passive coil.
4. Fit steering column shroud.  
For additional information, refer to: Steering Column Shrouds (501-05 Interior Trim and Ornamentation, Removal and Installation) / [Steering Column Shrouds](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
5. Fit instrument cluster.  
For additional information, refer to: Instrument Cluster (413-01, Removal and Installation) / [Instrument Cluster](#) (413-01 Instrument Cluster, Removal and Installation).