

JATCO Automatic Gearb

er

hibitor Switch
ever Assembly

omatic Transmission (EAT

able Codes (DTC)

3333

				transmission
P0735	All	5th gear ratio	Up/Down shifts from 1st to 5th can be sensed	Out of range – Incorrect ratio when 1st gear selected – Check shift solenoids, wiring and connections – Investigate transmission
P0736	All	Reverse gear ratio	Reverse operative	Out of range – Investigate transmission
P0743	All	Lock-up duty solenoid	Approximately 12.6 $\frac{?}{?}$ at 20 °C (68 °F)	Open circuit or <u>short</u> circuit to earth/battery – Check wiring and connection – Renew lock-up duty solenoid
P0748	All	Line pressure duty solenoid	Approximately 2.9 $\frac{?}{?}$ at 20 °C (68 °F)	Open circuit or short circuit to earth/battery – Check wiring and connection – Renew line pressure duty solenoid
P0753	All	Shift solenoid A	Approximately 16 $\frac{?}{?}$ at 20 °C (68 °F)	Open circuit or short circuit to earth/battery – Check wiring and connection – Renew shift solenoid A
P0758	All	Shift solenoid B	Approximately 16 $\frac{?}{?}$ at 20 °C (68 °F)	Open circuit or short circuit to earth/battery – Check wiring and connection – Renew shift solenoid B