

# In-Car Entertainment

## RADIO AERIAL

A single aerial (or twin aerials on some models) is etched onto the surface of the glass of one (or both) rear side windows.

No maintenance is possible, however it is important to ensure that the interior surface of the glass is protected from possible damage caused by contact with hard objects or from the injurious effects of abrasive cleaners.

## IN-CAR ENTERTAINMENT

### Radio cassette player

Full operating instructions for any audio equipment fitted as standard to your vehicle, are contained in the '*In-Car Entertainment*' book in the vehicle literature pack.


### CD autochanger\*

The CD autochanger is located under the right hand front seat. Full operating instructions are contained in the '*In-Car Entertainment*' book.

## WARNING

***DO NOT insert or eject the magazine while driving.***

## HEADPHONE CONTROLS\*

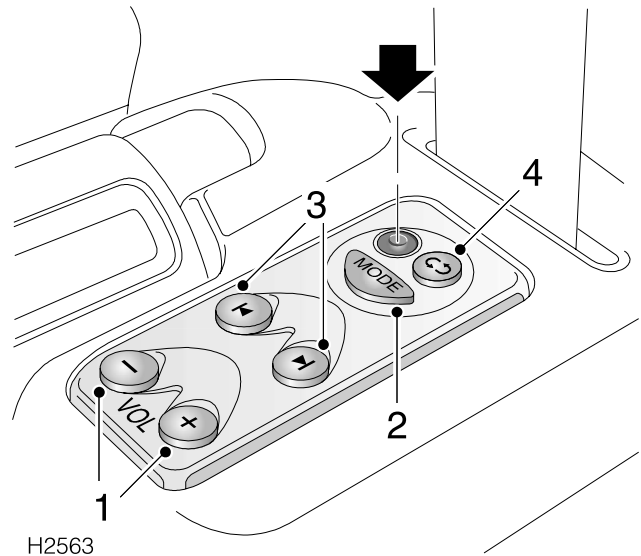

The control panel (illustrated) is for the convenience of rear seat passengers and can be used with headphones only.

The controls include:

1. Volume
2. Mode (for changing between radio, cassette tape and CD)
3. Auto search (to search up or down the selected waveband, or skip forward or back between tracks of a tape or CD).
4. Multi-function control (selects the next radio pre-set, reverses the direction of tape play, or selects the next CD in the autochanger).

Full operating instructions are included in the '*In-Car Entertainment*' book.

***NOTE:*** Where a conflict arises between operation of the vehicle's audio unit and the headphone controls, the audio unit takes priority.