

HORN (G1226537)

REMOVAL AND INSTALLATION

- **86.30.10**
- **HORN – EACH – RENEW**
- **ALL DERIVATIVES**
- **0.40**

REMOVAL



NOTE:

Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.




WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Remove the RH front wheel and tire.

4.

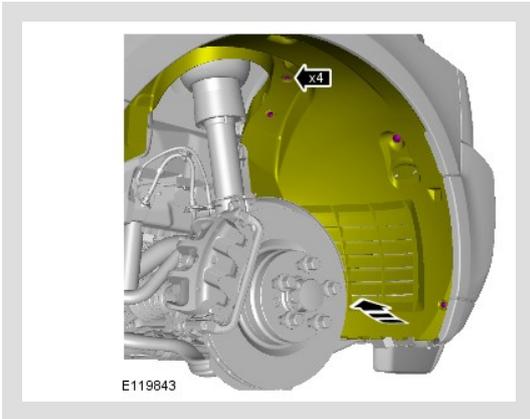


Torque: 1.5 Nm

5.

 **NOTE:**


Some variation in the illustrations may occur, but the essential information is always correct.

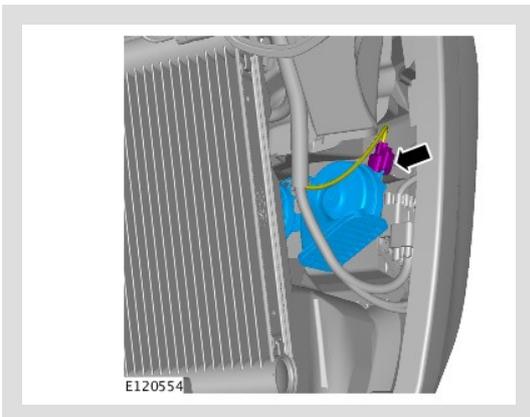

6.

 **NOTE:**

Some variation in the illustrations may occur, but the essential information is always correct.

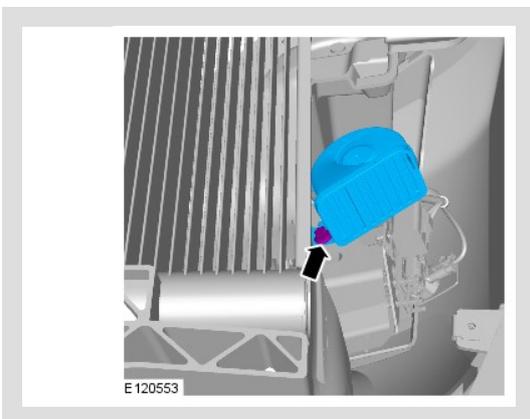


Torque: 20 Nm

7.

 **NOTE:**

Do not disassemble further if the component is removed for access only.

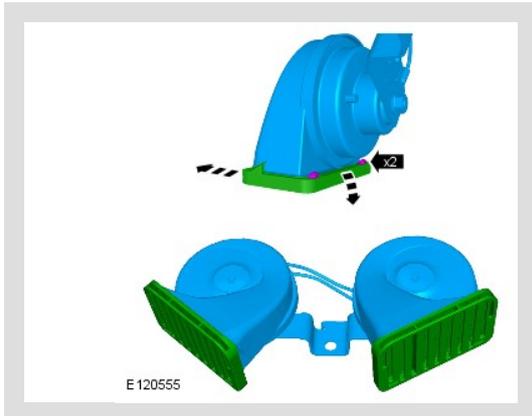

INSTALLATION

1. To install, reverse the removal procedure.