

External transmission
harness connector
CO243

1 & 2 = Turbine-shaft speed sensor	(513 to 627 ohms)
3 & 4 = Intermediate-shaft speed sensor	(513 to 627 ohms)
5 & 6 = Output-shaft speed sensor	(513 to 627 ohms)
7 & 8 = Temperature sensor	(Refer to page 9)
18 & 9 = Shift solenoid A	(14 to 18 ohms)
18 & 10 = Shift solenoid B	(14 to 18 ohms)
18 & 11 = Shift solenoid C	(14 to 18 ohms)
18 & 12 = Low-clutch timing solenoid	(14 to 18 ohms)
18 & 13 = 2/4 timing solenoid	(14 to 18 ohms)
18 & 14 = Reduction-timing solenoid	(14 to 18 ohms)
18 & 15 = Pressure-control solenoid	(2.6 to 3.2 ohms)
18 & 16 = 2/4 duty solenoid	(2.6 to 3.2 ohms)
18 & 17 = TCC solenoid	(12 to 13.2 ohms)

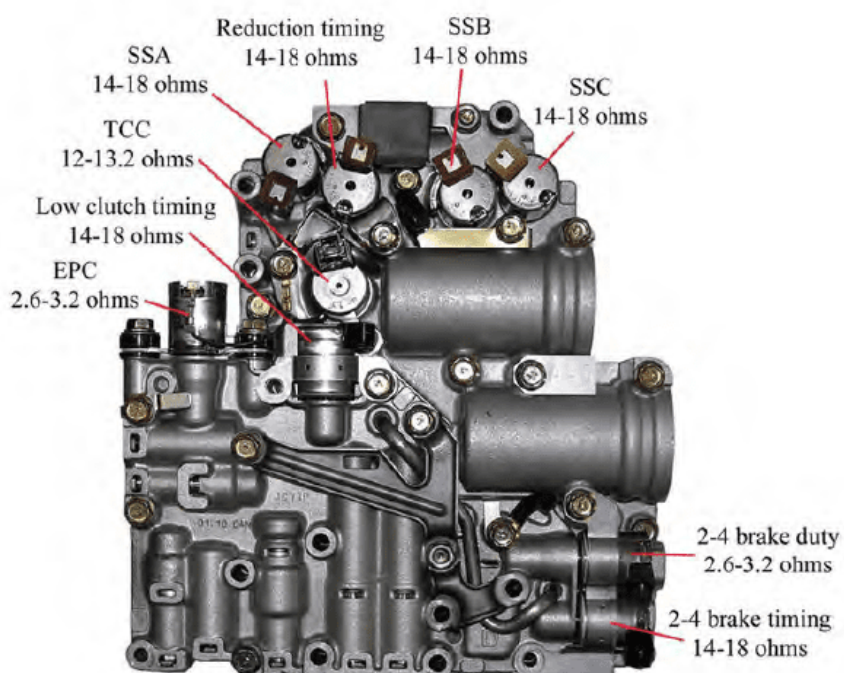


Figure 2