


What are the adjustments on throttle spindle for?

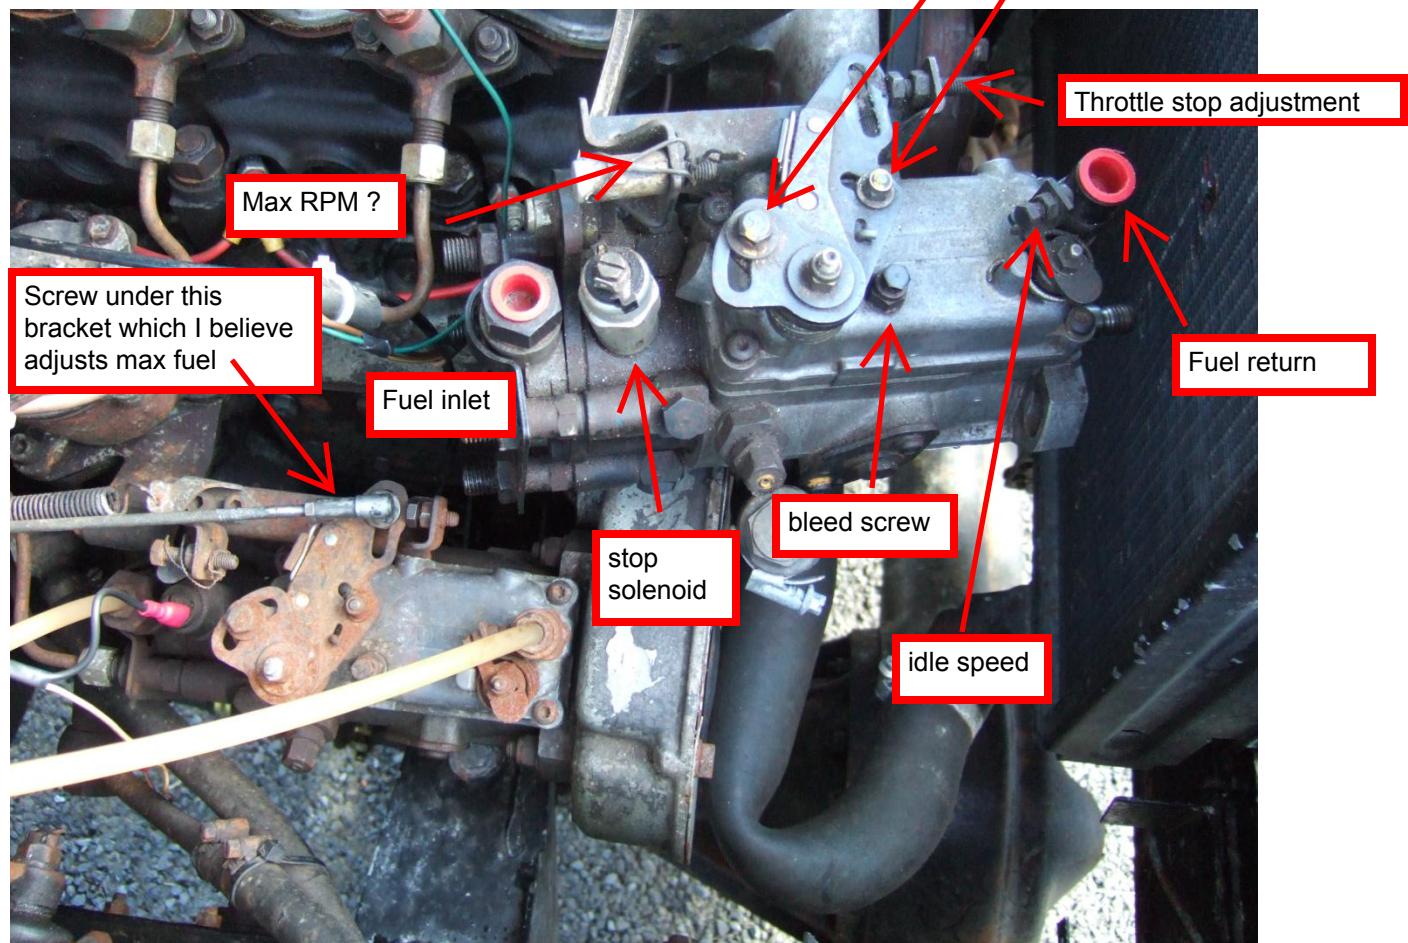

Fitted pump and spare adjusted differently?
Right hand of the two adjusters on throttle plate adjusts a spring underneath throttle which acts on another spindle into top of pump.
Left hand adjuster moves throttle in relation to the RH one and changes spring tension between the two

19J diaphragm change info here

<http://forums.lr4x4.com/index.php?showtopic=33911>