


What are the adjustments on throttle spindle for?

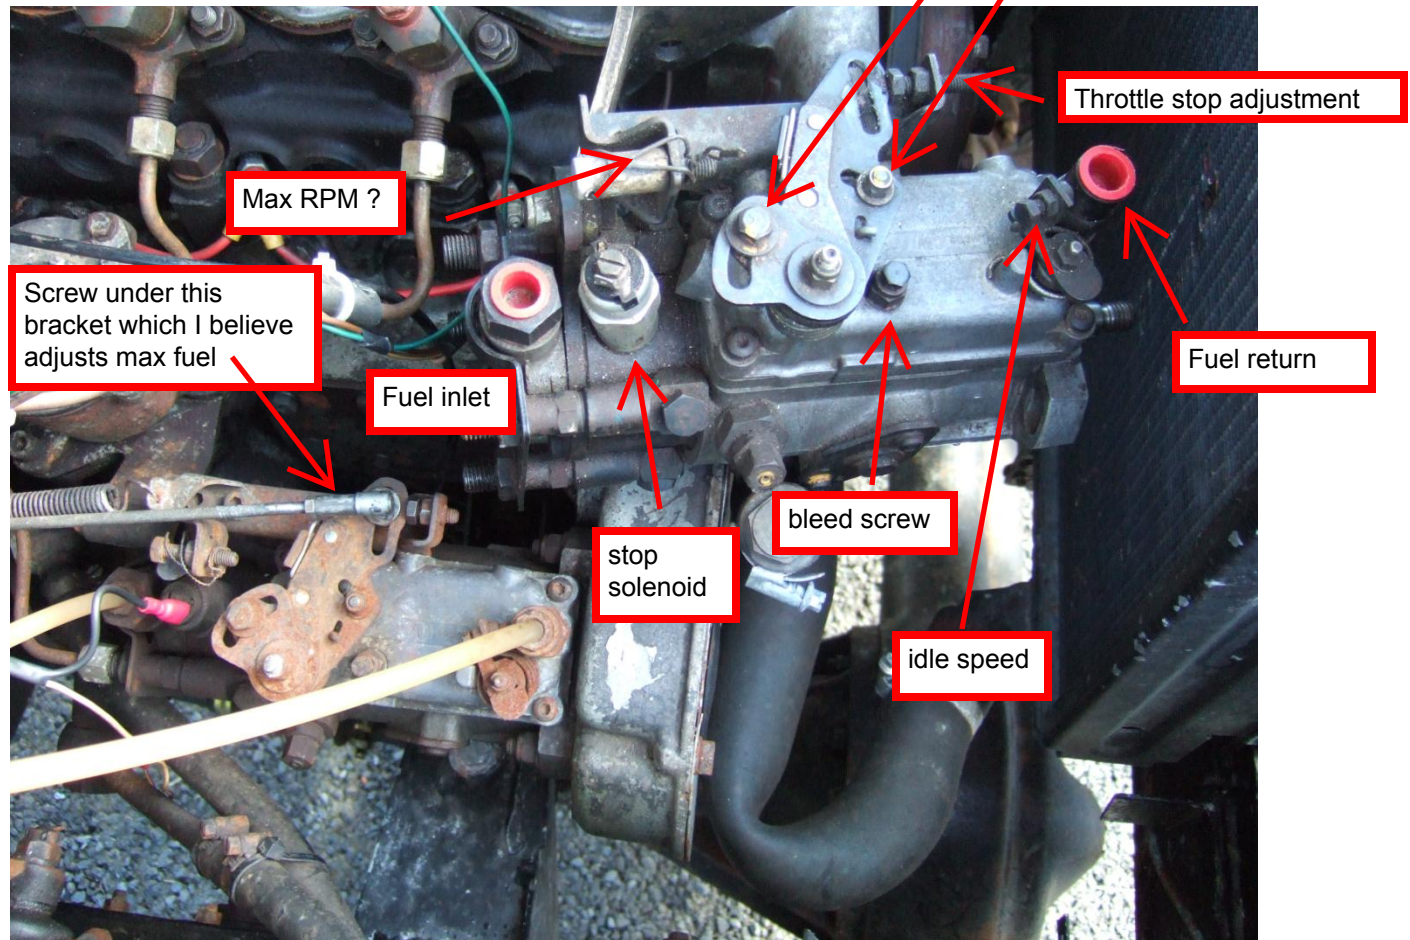

Fitted pump and spare adjusted differently?
Right hand of the two adjusters on throttle plate adjusts a spring underneath throttle which acts on another spindle into top of pump.
Left hand adjuster moves throttle in relation to the RH one and changes spring tension between the two