


Exhaust System - ID4 2.2L Diesel - Diesel Particulate Filter - Component

Location

Description and Operation

COMPONENT LOCATION - DIESEL PARTICULATE FILTER

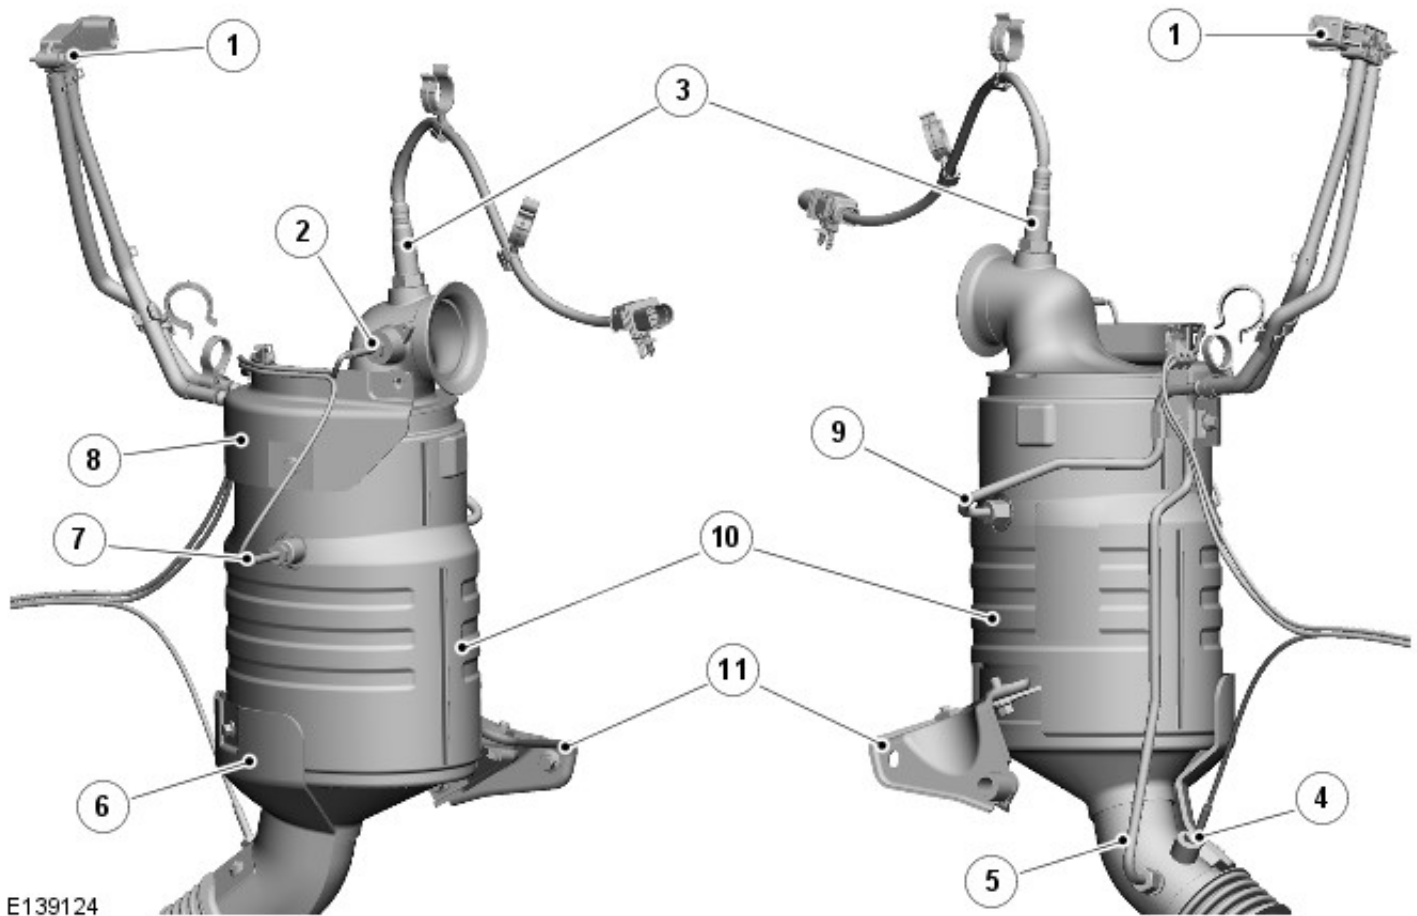

E139124

Item Description

- 1 Differential pressure sensor
- 2 Temperature sensor - pre catalytic converter
- 3 [HO2S \(heated oxygen sensor\)](#)
- 4 Temperature sensor - post [DPF \(diesel particulate filter\)](#)
- 5 Low pressure pipe - post [DPF](#)
- 6 Lower heat shield
- 7 Temperature sensor - post catalytic converter
- 8 Upper heat shield
- 9 High pressure pipe - pre [DPF](#)
- 10 Insulation panel
- 11 Support bracket

COMPONENT LOCATION - DIFFERENTIAL PRESSURE SENSOR