

FITTING INSTRUCTIONS

> Discovery



Dog Guard

Note -

For vehicles with handles follow instructions 1 to 3 and 28 to 44



For vehicles without handles follow instructions 4 to 44







BRITPART









The quality parts for Land Rovers









Fitting Instructions








Discovery - Dog Guard

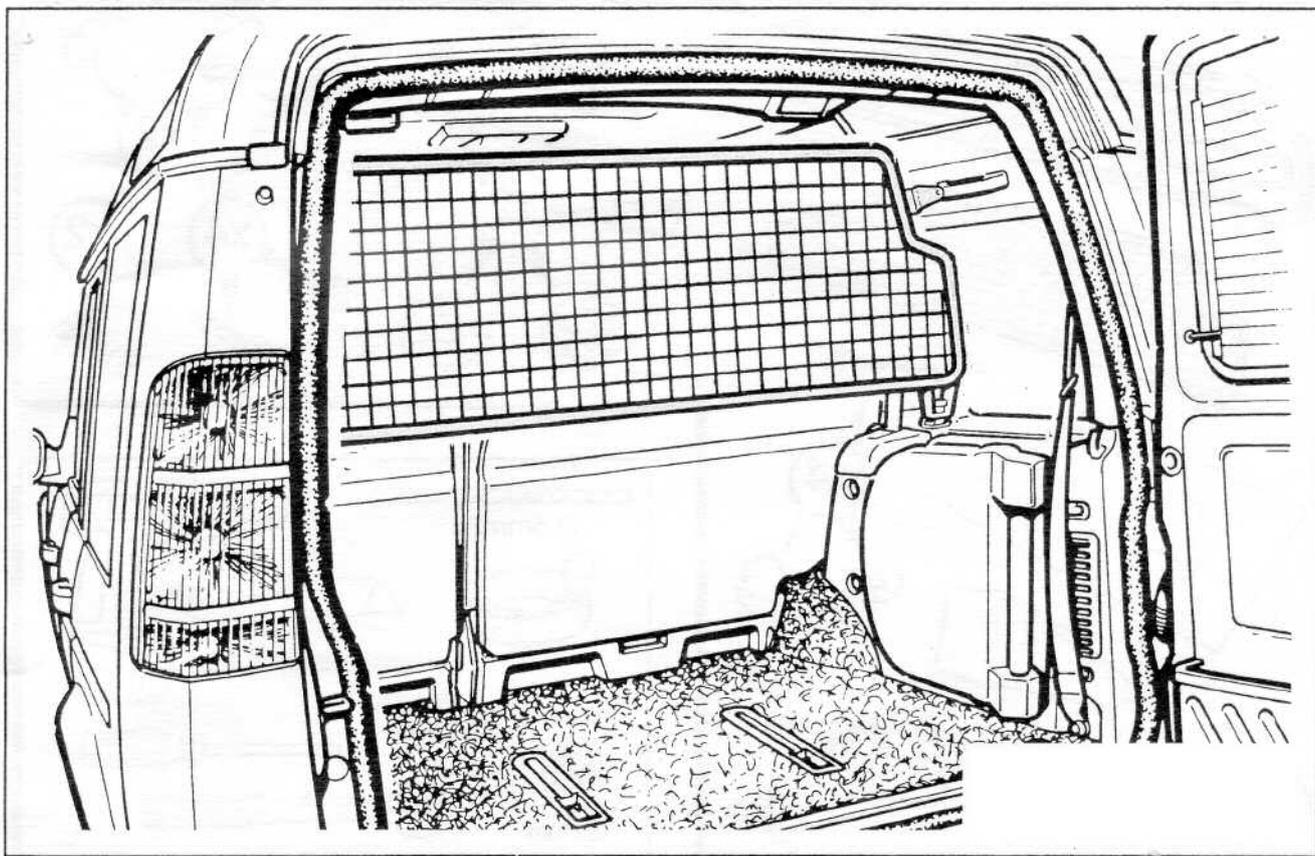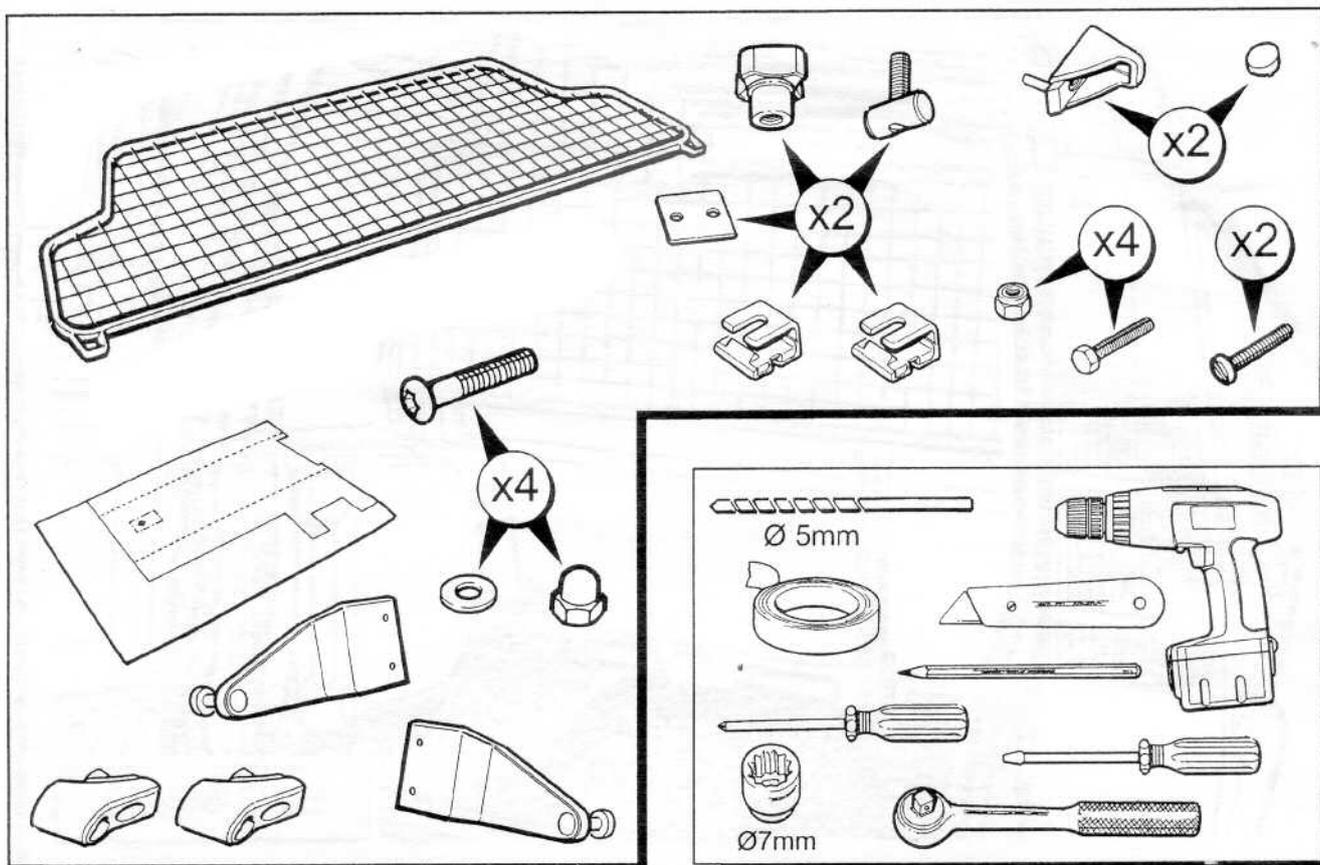

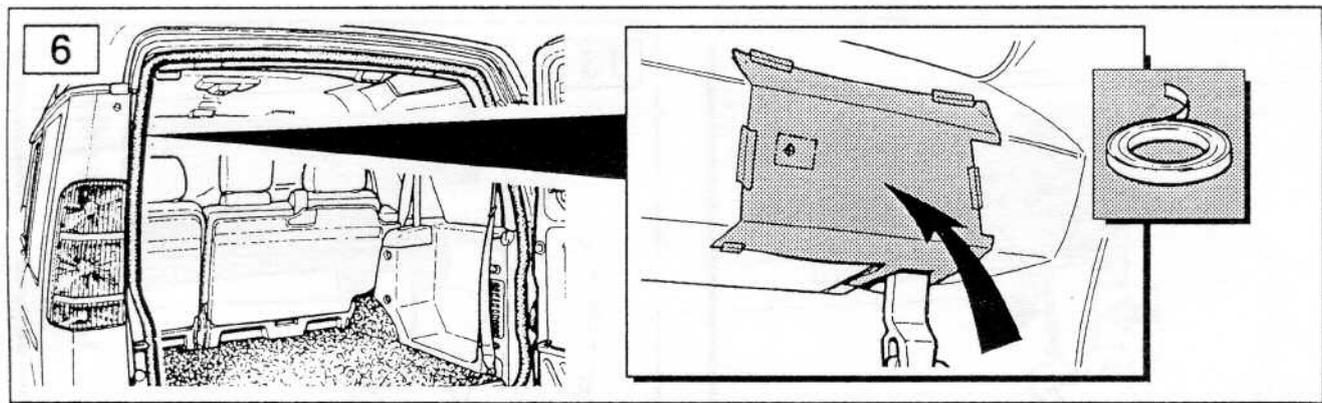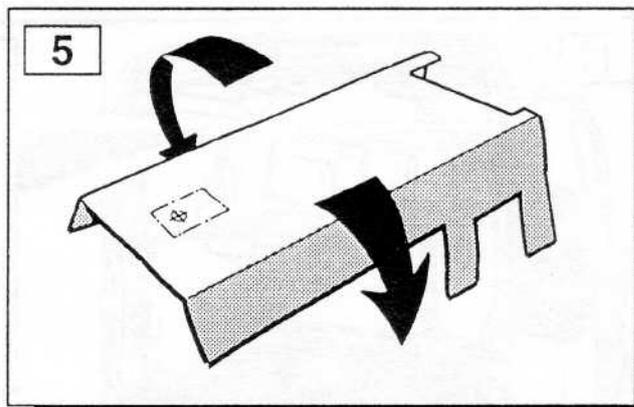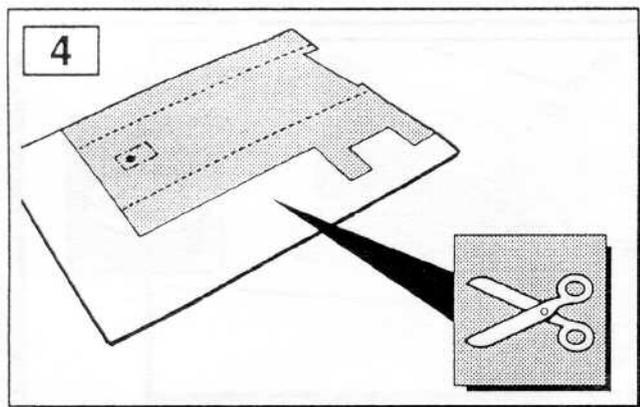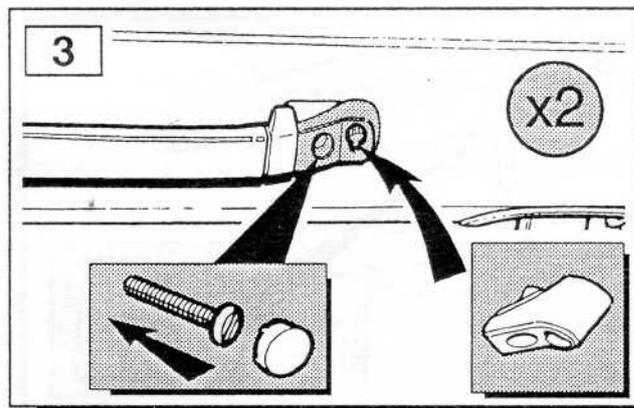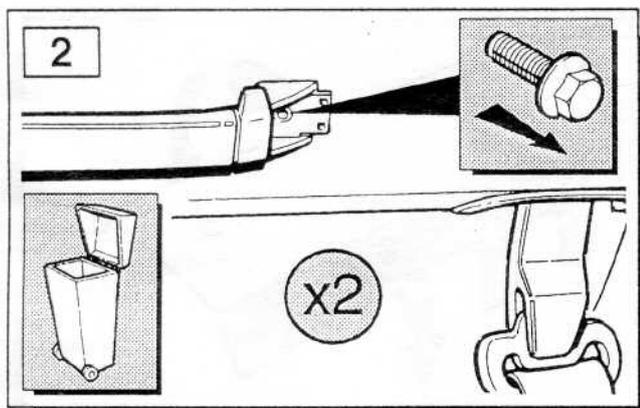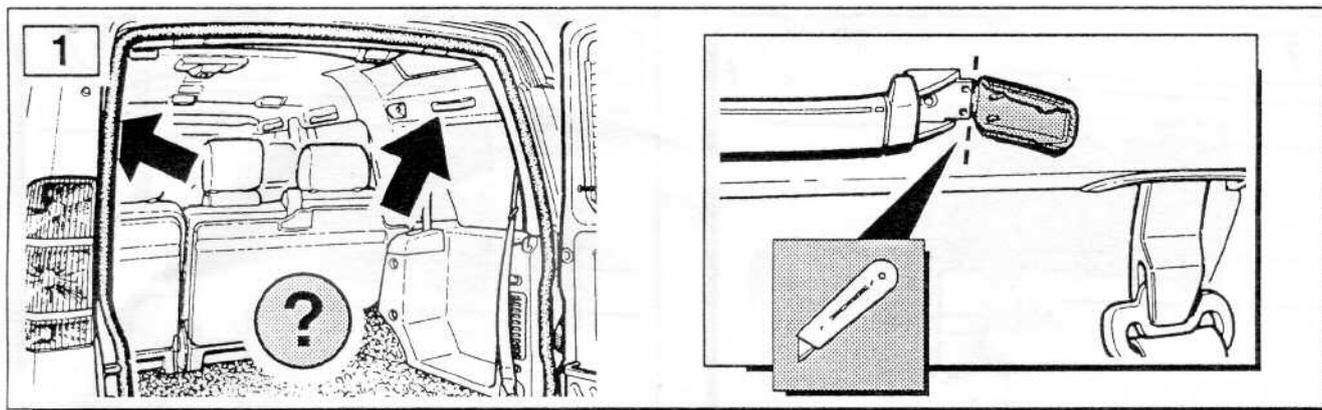

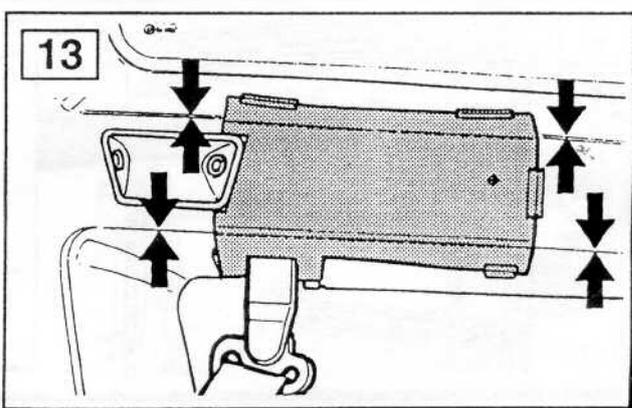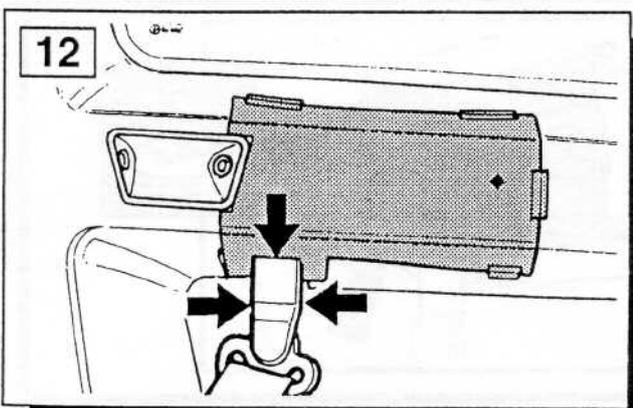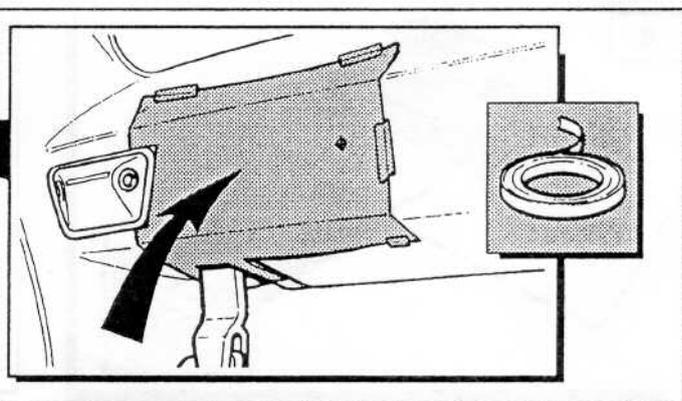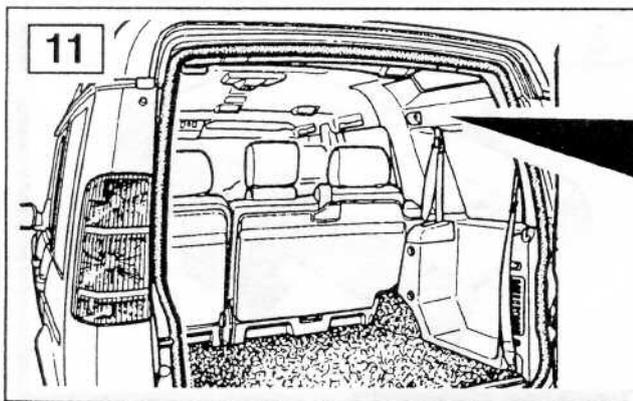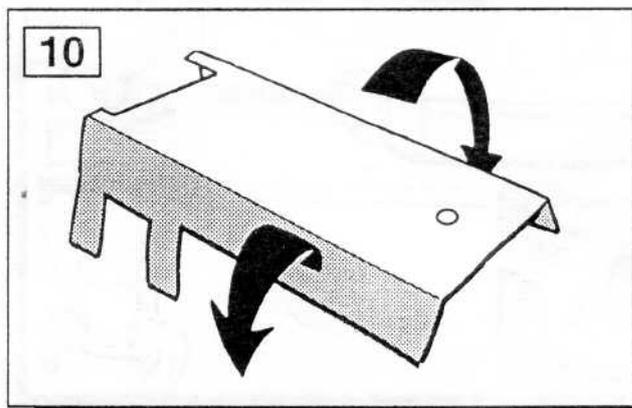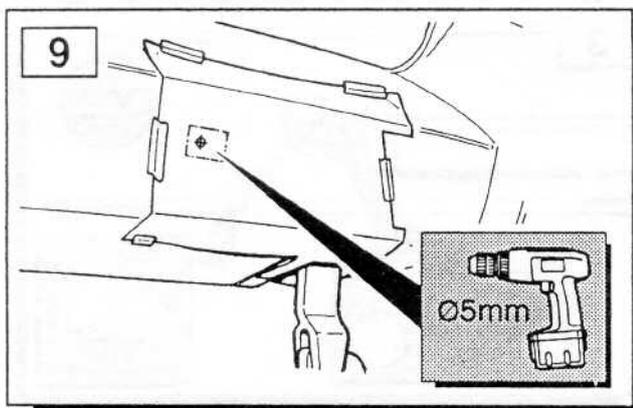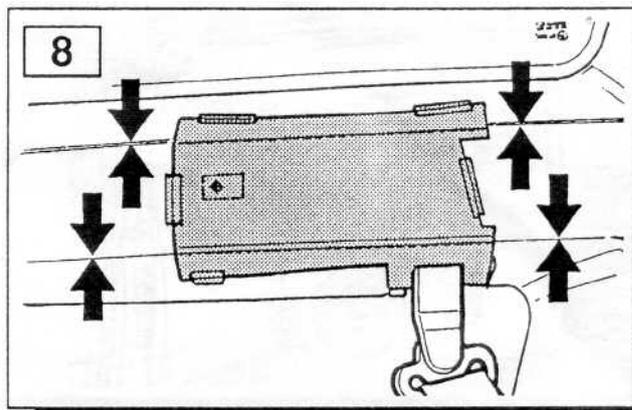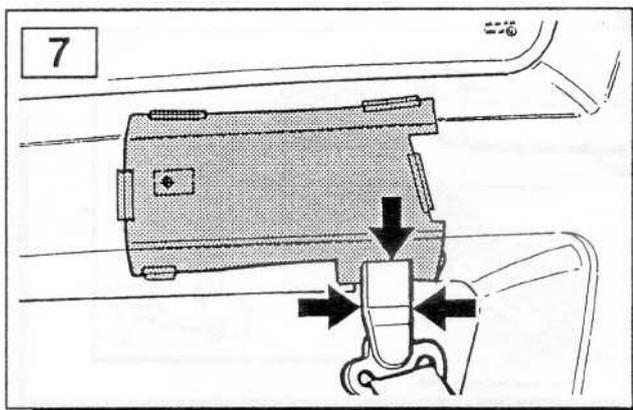

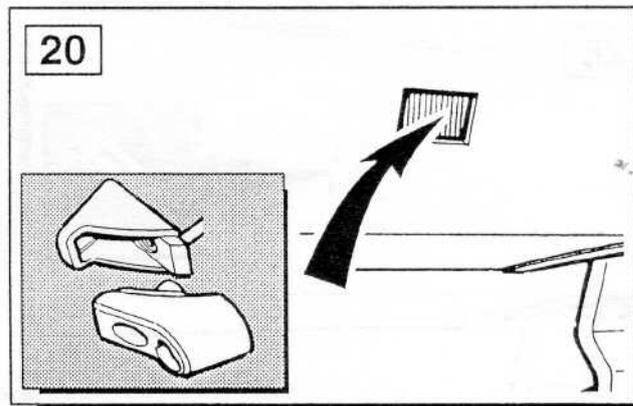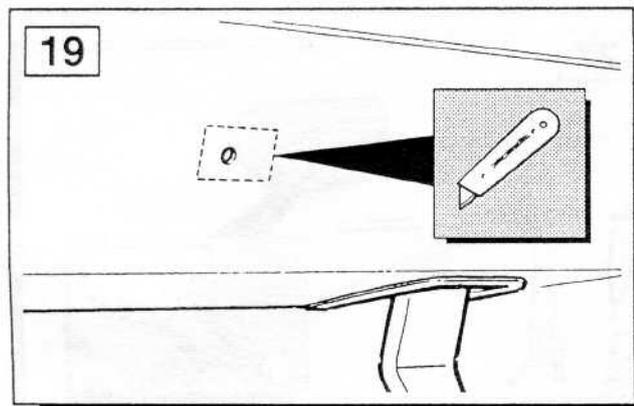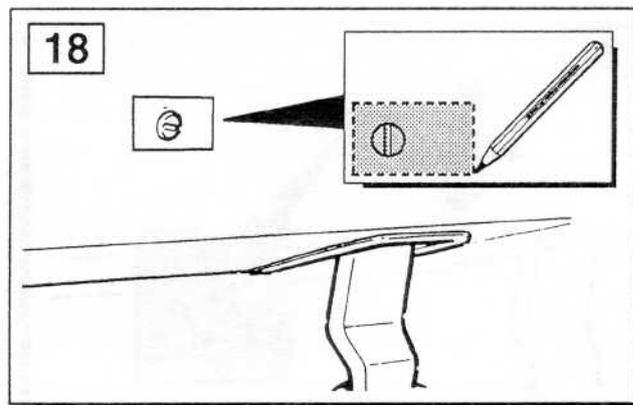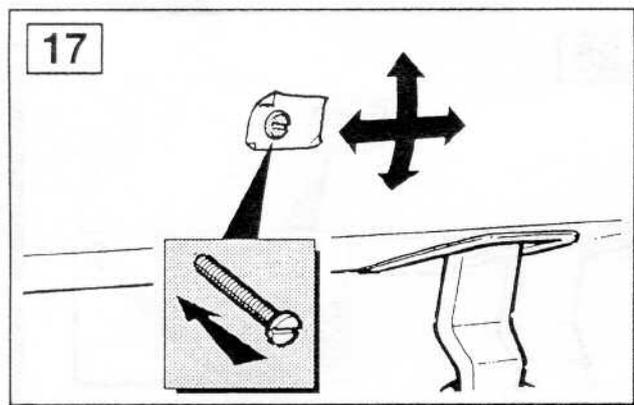
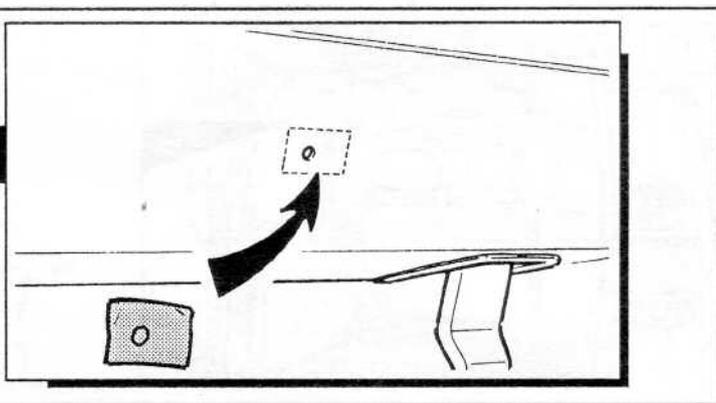
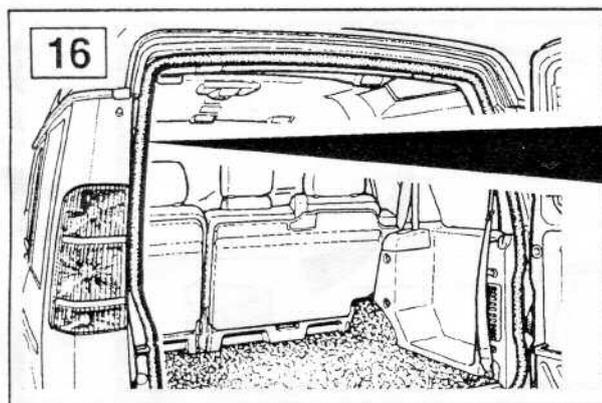
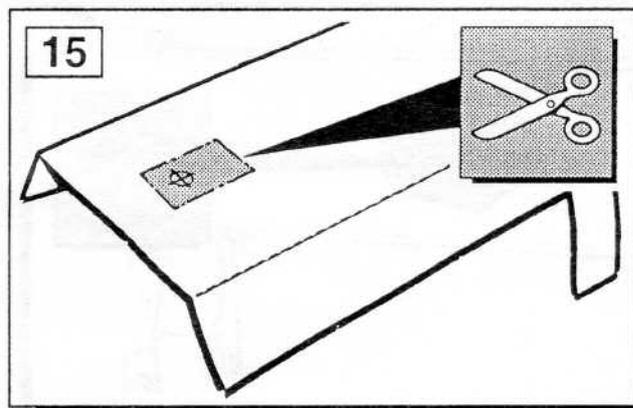
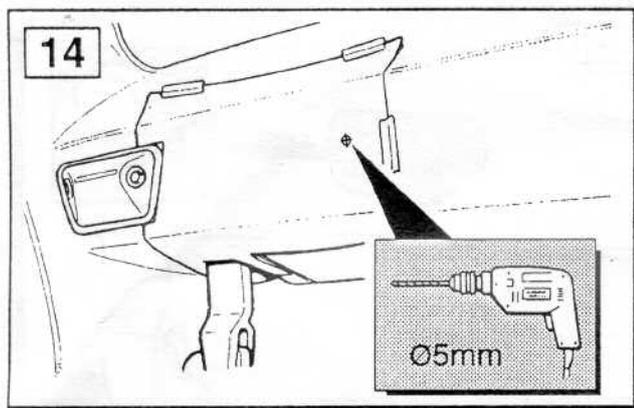


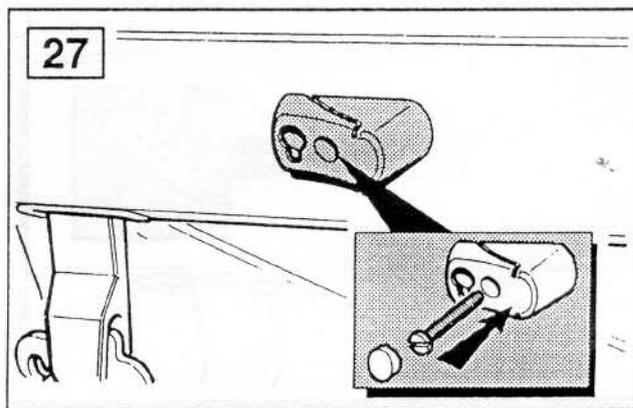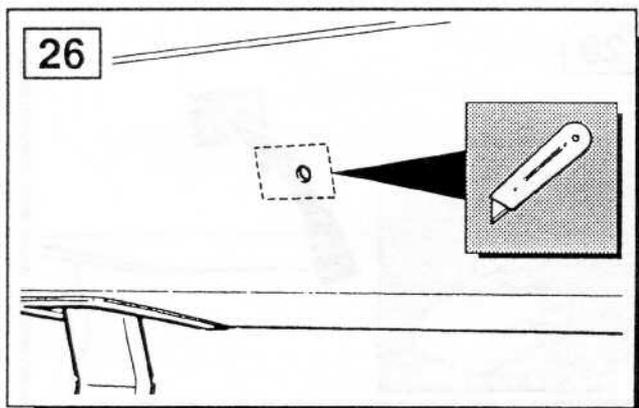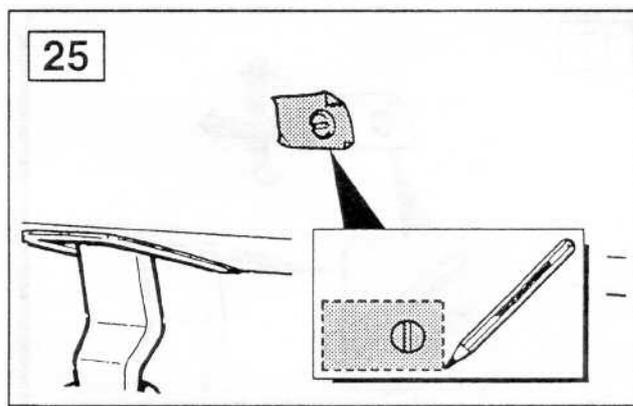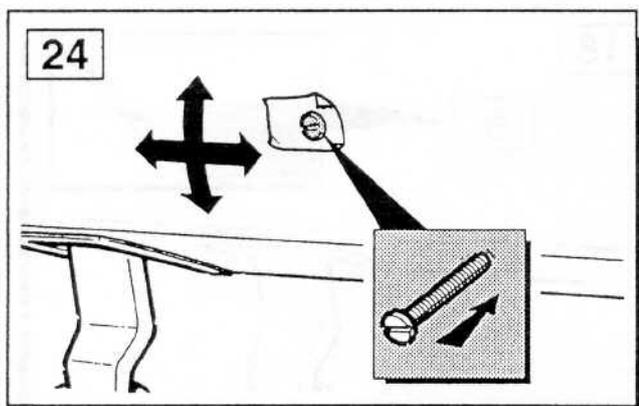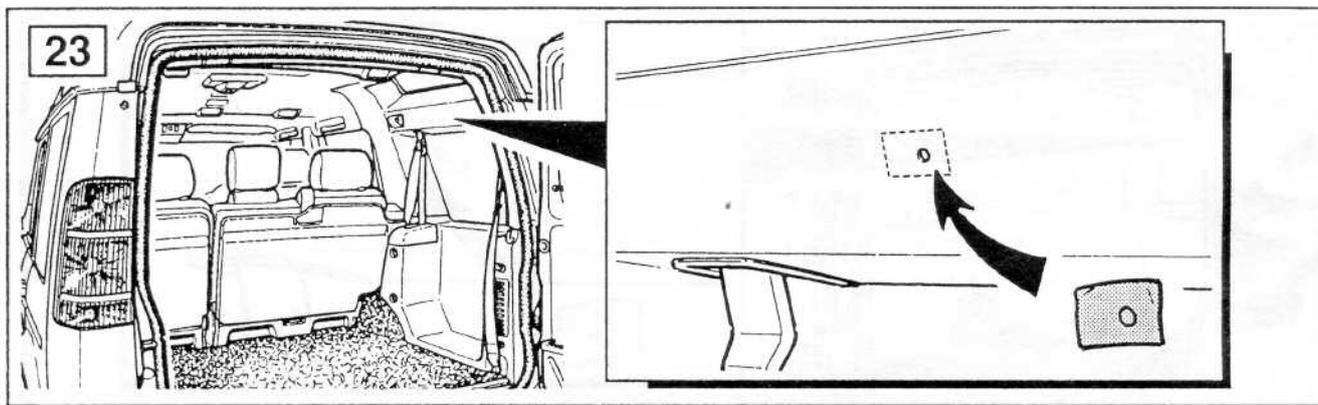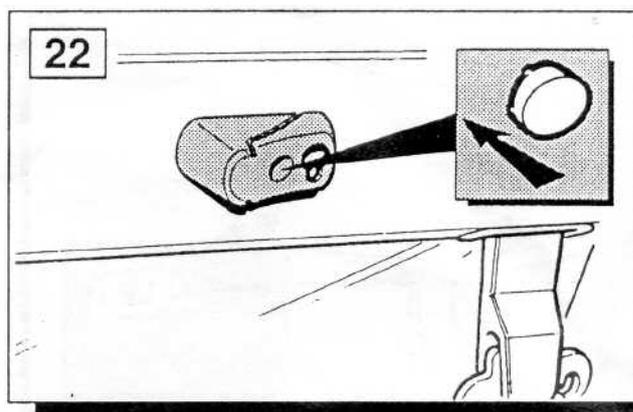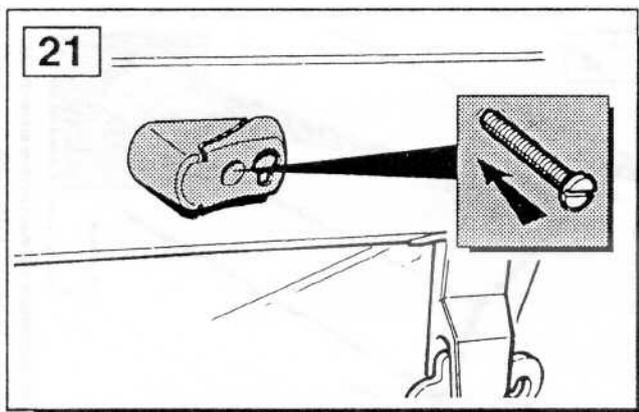




28

All vehicles




29




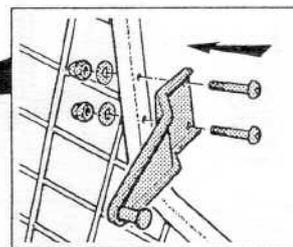
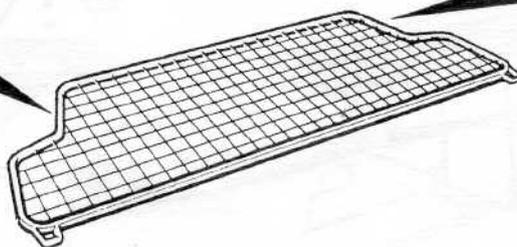

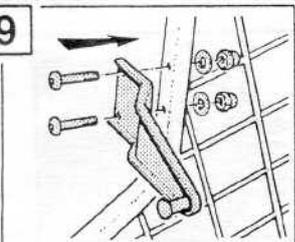








30

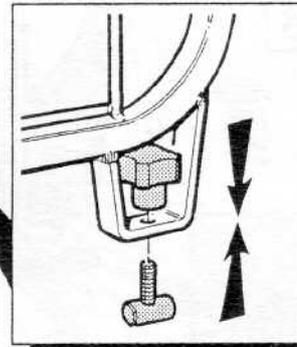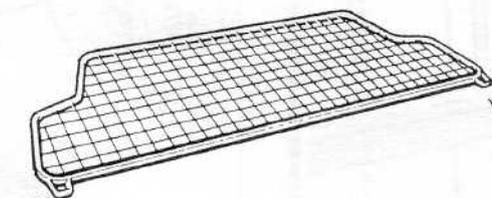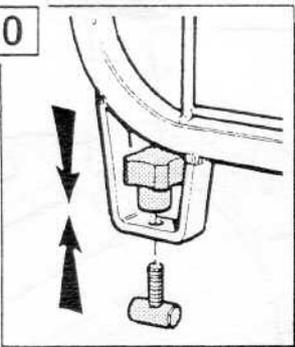


31



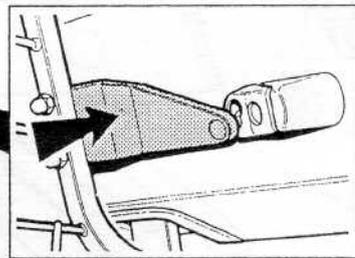
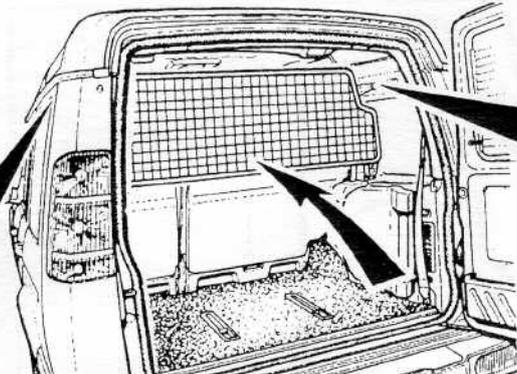
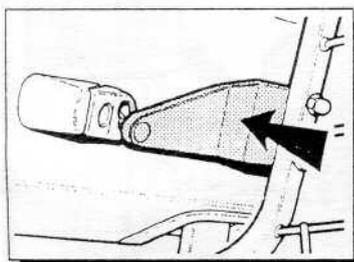


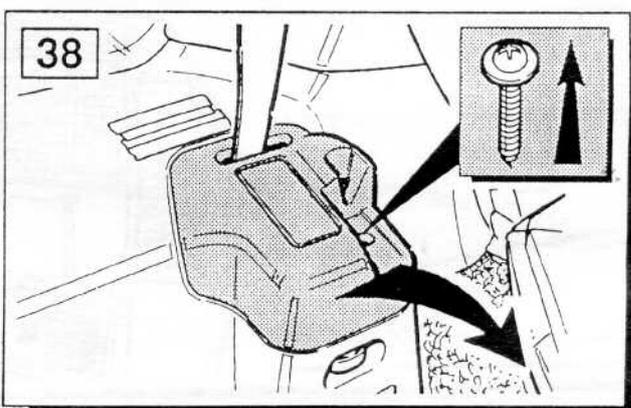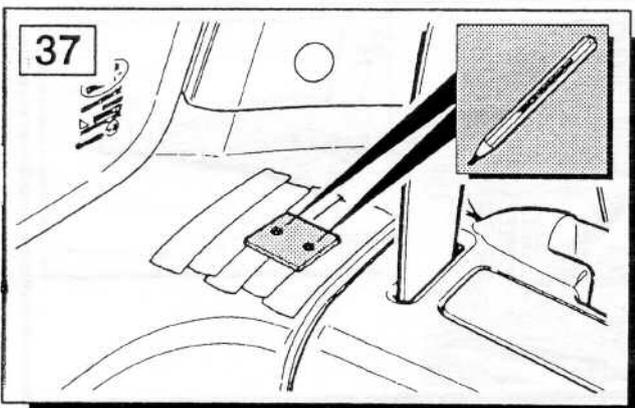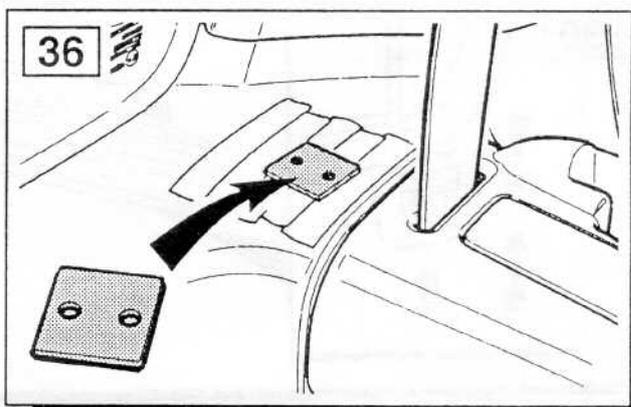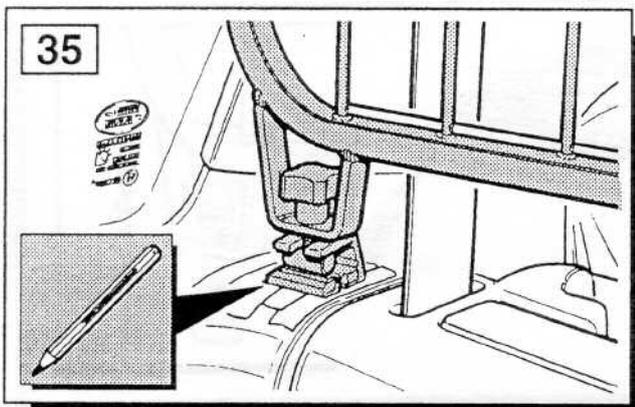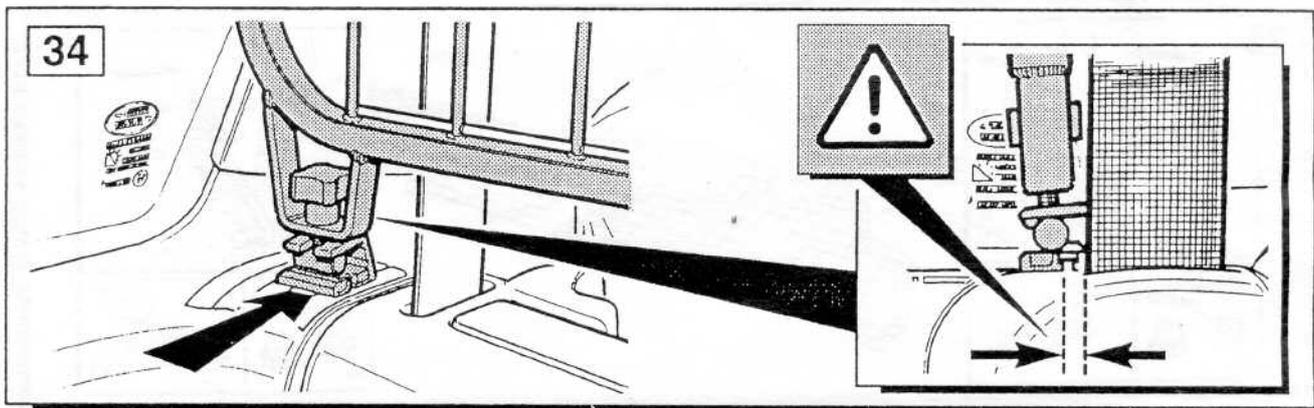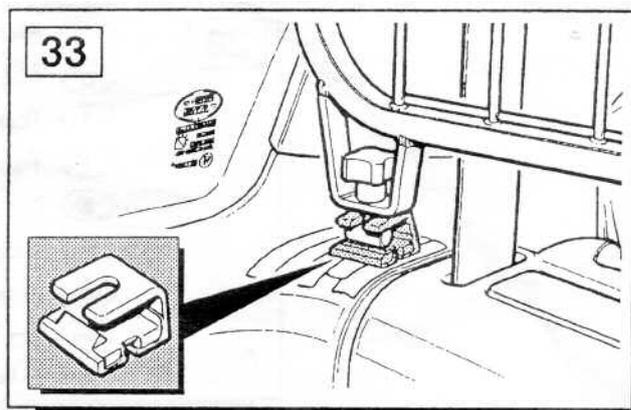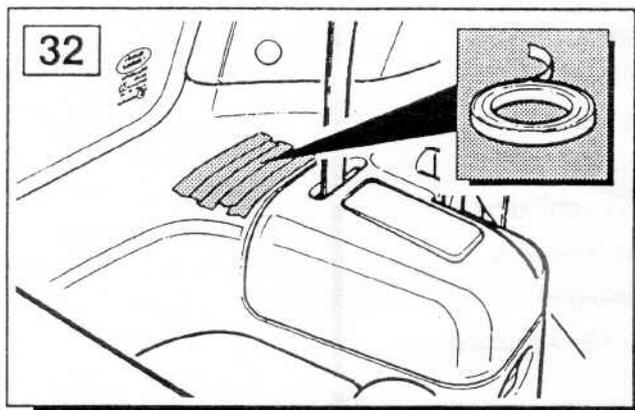

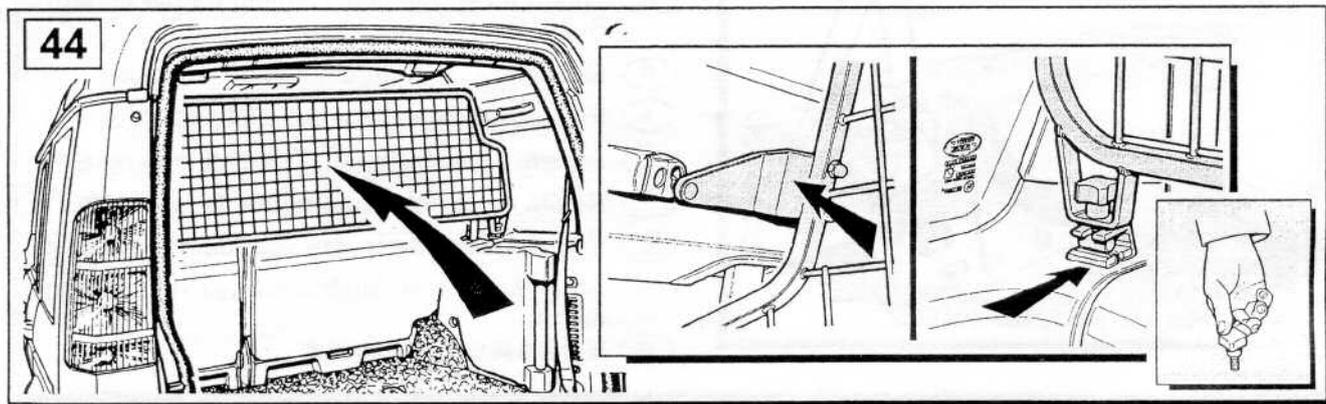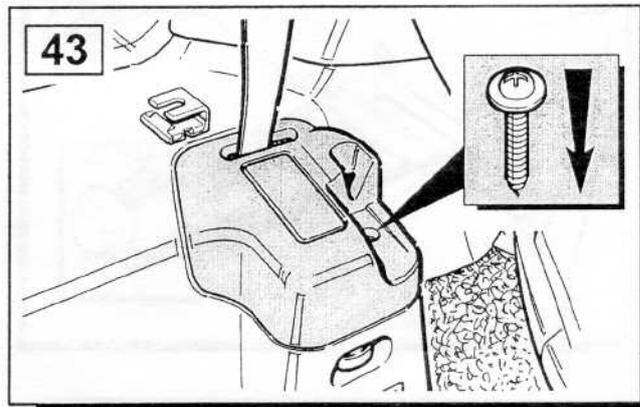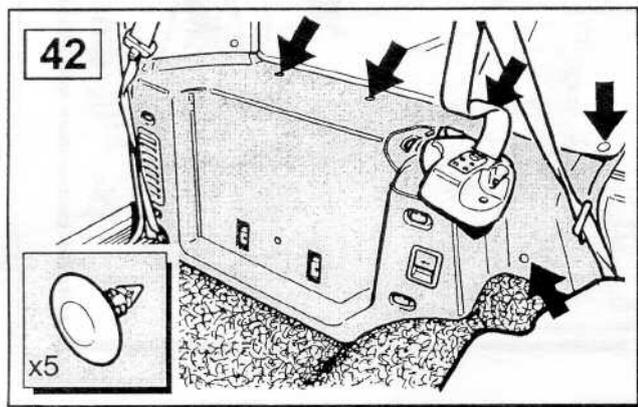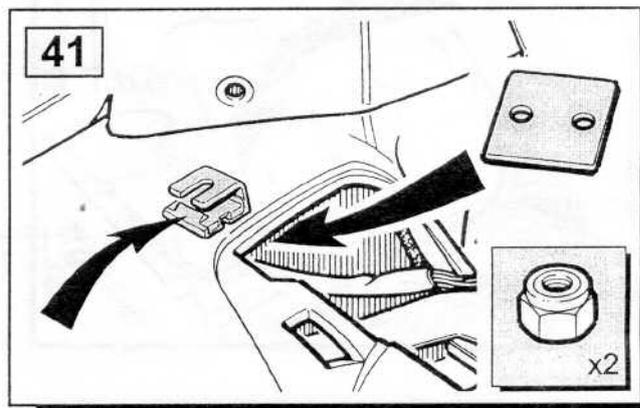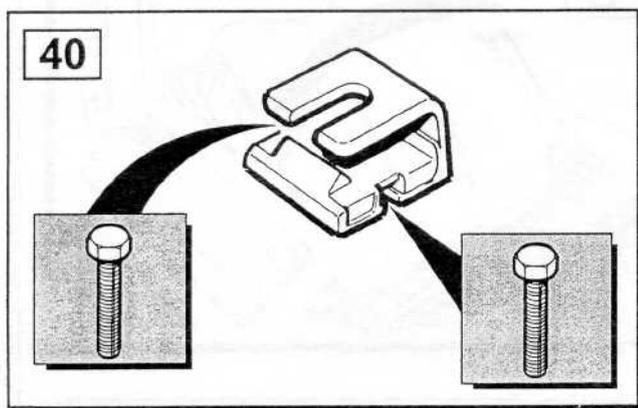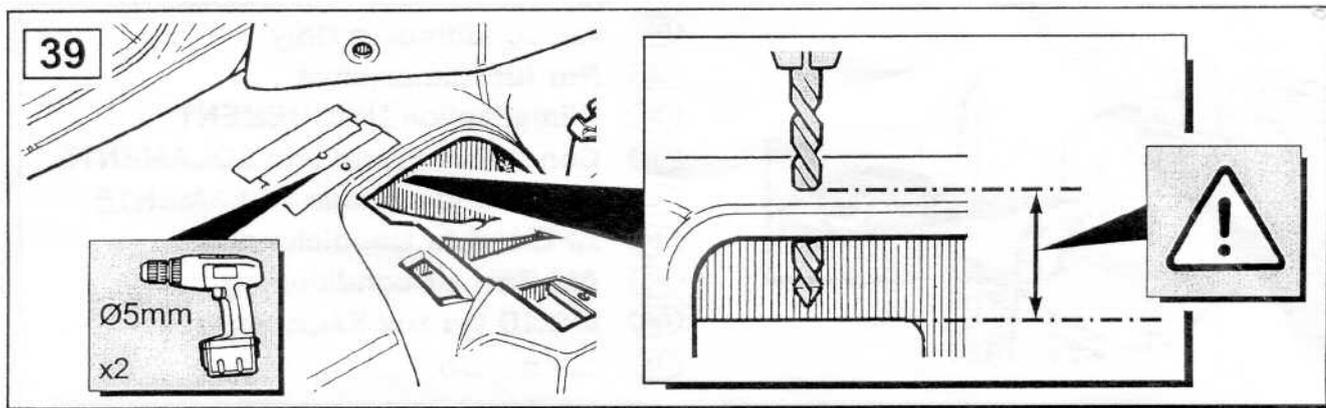




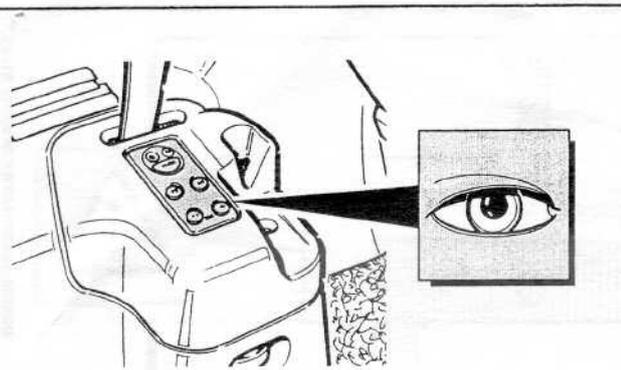


Air conditioning only

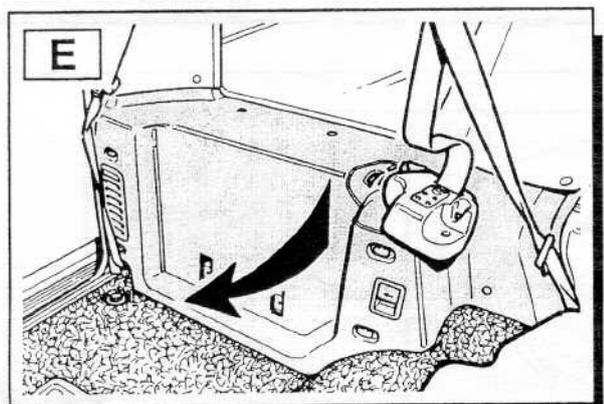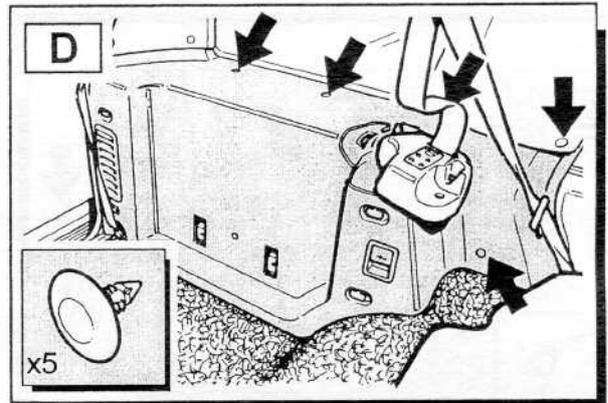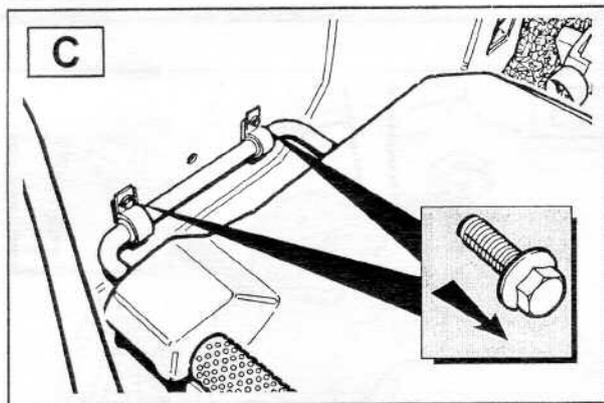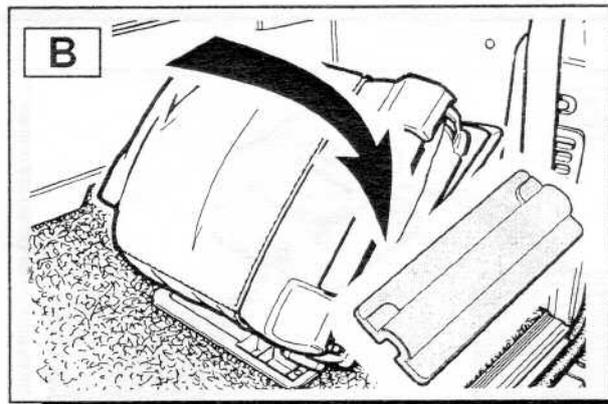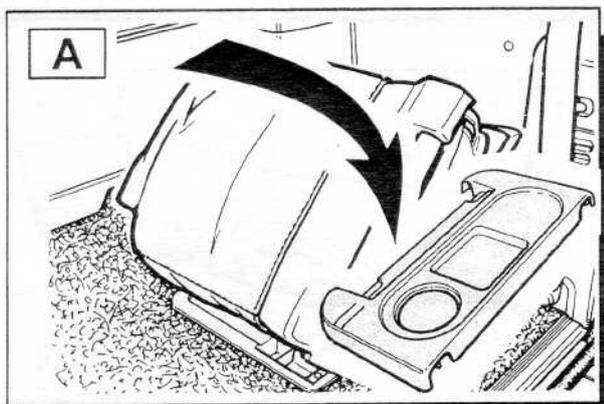

Repeat procedure
for opposite side

Air conditioning only

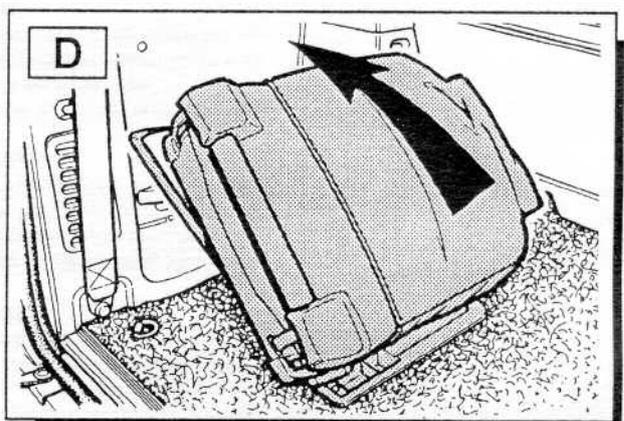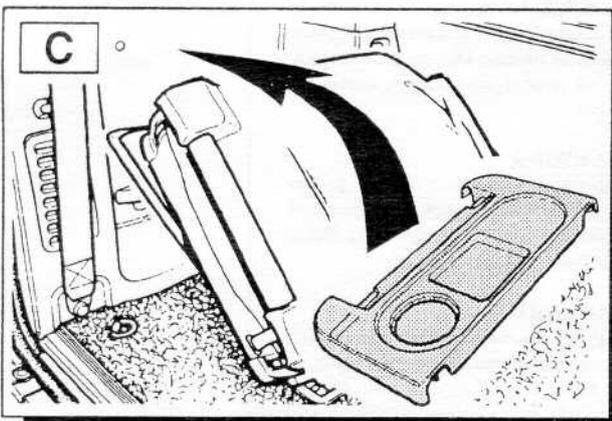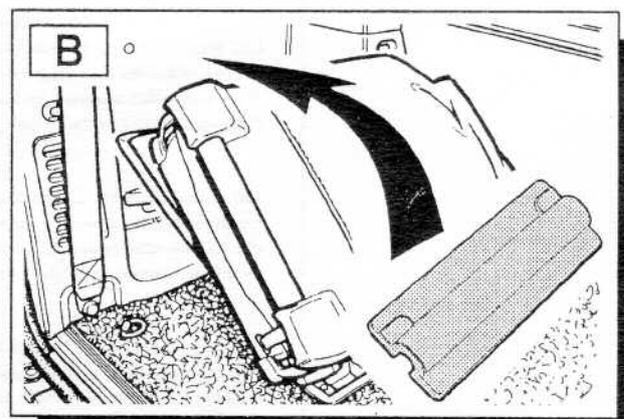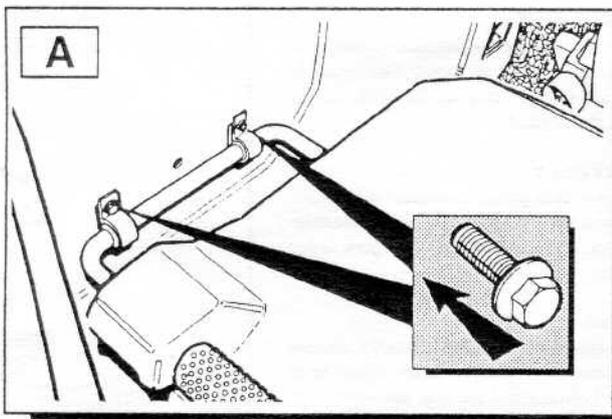

WARNING

Accessories which are not properly fitted can be dangerous.

Read the instructions carefully prior to fitting.

Whilst fitting, comply with the instructions at all times.