


• Release the fuel return line from the clip.

5. Remove the fuel cooler.

- Remove the 2 bolts.

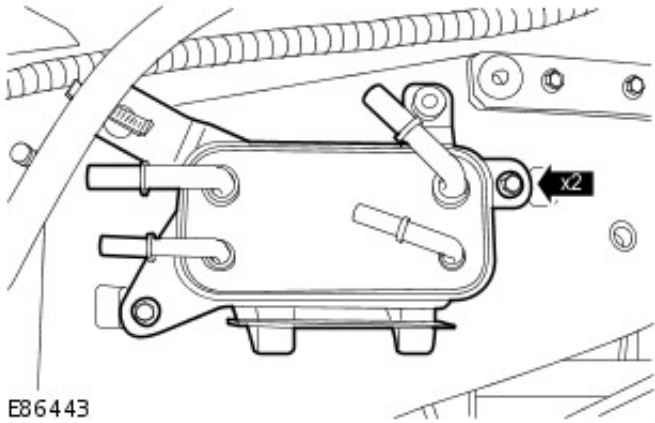

Installation

1. Install the fuel cooler.

- Tighten the bolts to 23 Nm (17 lb.ft).

2. Secure the fuel return line in the clip.

3. NOTE: Remove and discard the blanking caps.

Connect the fuel lines.

4. Bleed the fuel system.

For additional information, refer to: [Low-Pressure Fuel System Bleeding](#) (310-00 Fuel System - General Information, General Procedures).

5. Fill and bleed the cooling system.

For additional information, refer to: [Cooling System Draining, Filling and Bleeding](#) (303-03 Engine Cooling - 2.4L Duratorq-TDCi HPCR (103kW/140PS) - Puma, General Procedures).