

Starting System - 2.4L Duratorq-TDCi HPCR (103kW/140PS) - Puma - Starter Motor

Removal and Installation

Removal


1. Disconnect the battery ground cable.
For additional information, refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).

2.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.


Raise and support the vehicle.
For additional information, refer to: [Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

3. Remove the fuel line support bracket.

- Remove the nut.

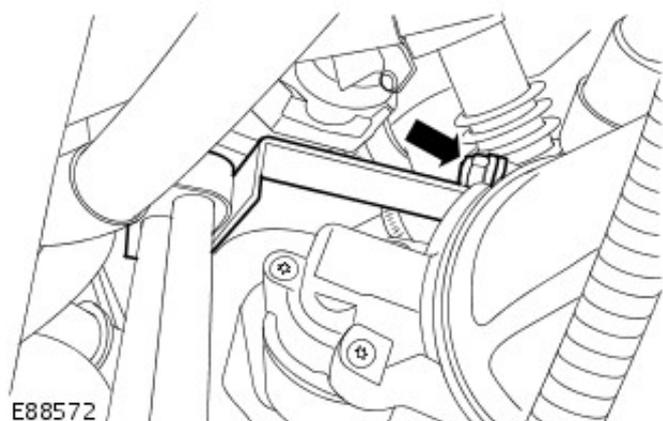


4. Release the starter motor wiring harness clip.

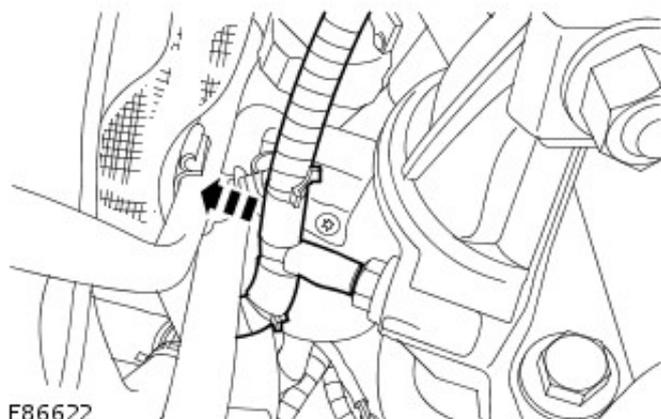

5. Release the 2 battery positive cables and the switch lead from the starter motor solenoid.

1. Remove the battery positive cable nut.
2. Release the starter motor switch lead nut.

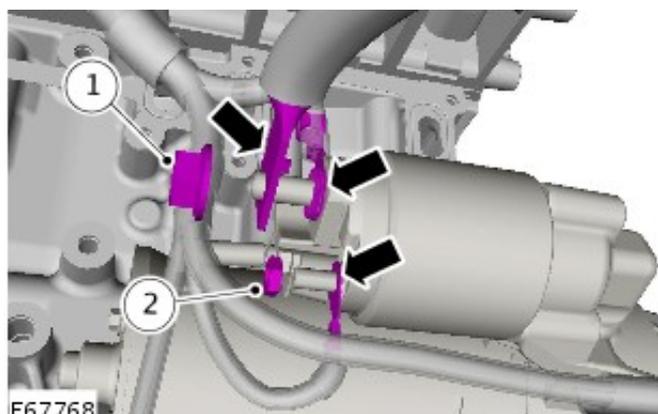

6. Remove the starter motor lower bolt.