


# Fuses

Always replace a fuse with another of the same value, however, if the replacement fuse blows immediately the circuit **MUST** be checked by a qualified Dealer/Authorised Repairer.

**NOTE:** There are a number of spare fuses included within the fuse box (see fuse box label).

A label in the fuse box cover shows the circuits protected, the fuse values and their locations. They are also listed on the following page.

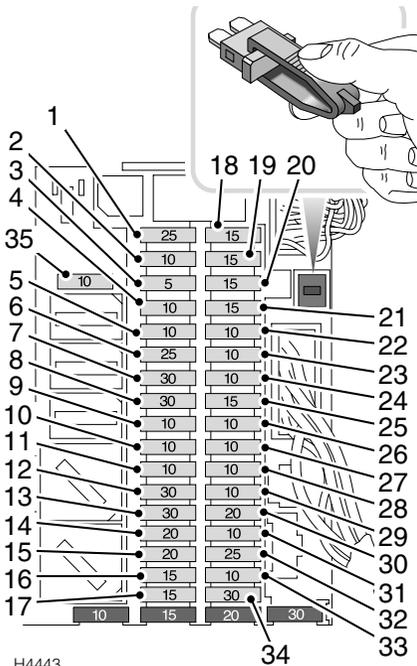

Press the fuse removal tweezers onto the head of the suspect fuse (as shown) and pull to remove. A break in the wire inside the fuse indicates that the fuse has 'blown' and must be replaced.

## Fuse specification

Fuse number	Rating (amps)	Circuit protected
1	25	Central door locking
2	10	Fuel flap release
3	10	Instrument pack & switch illumination
4	10	Fog guard lights - rear
5	10	Headlight main beam - LH
6	25	Air conditioning blower - rear
7	30	Heater blower - front
8	30	Heated rear window Heated mirrors

# Fuses

Fuse number	Rating (amps)	Circuit protected
9	10	Headlight dipped beam - LH
10	10	Headlight dipped beam - RH
11	10	Side & tail lights - LH Number plate light Headlight levelling motors Switch illumination Trailer socket Sunroof
12	30	Sunroof
13	30	Electric windows - rear
14	20	Ignition coils (Petrol models)
15	20	Cigar lighter Interior lights Seat heaters Vanity mirror illumination
16	15	Clock Radio Parking aid system Rear headphones
17	15	Radio amplifier Speakers
18	15	Wiper motor - rear
19	15	Wiper motor - front Screen washer - front
20	15	Interior lights Clock/radio memory Engine remobilisation Compact disc player* Key i/lock Diagnostics
21	15	Transfer box Alarm audible warning Shift i/lock
22	10	Headlight main beam - RH
23	10	Starter motor
24	10	Alternator Auto transmission Engine management

# Fuses

Fuse number	Rating (amps)	Circuit protected
25	15	Brake lights Reverse lights
26	10	Auxiliary circuits relays
27	10	Instruments Hill descent control
28	10	Self levelling suspension Anti-lock braking
29	10	Active cornering enhancement (ACE)
30	20	Cruise control Electric mirrors Screen washer - rear Diesel ECU
31	10	Air conditioning blower - front Power-fold mirrors
32	25	Accessory socket
33	10	Side & tail lights - RH Headlight levelling switch Radio Trailer socket Switch illumination
34	30	Electric windows - front
35	10	<b>Airbag SRS - DO NOT REMOVE</b>