



2. Install the fuel metering valve with new seal and gasket.

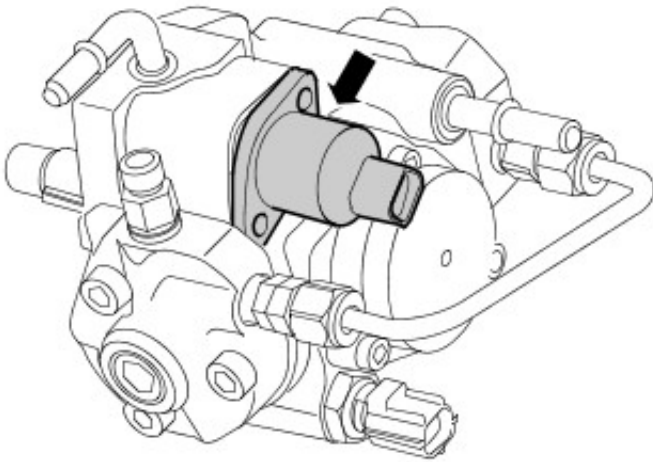

E105077


2. Install the 2 fuel metering valve securing bolts.

- Stage 1 tighten bolts to 5 Nm (4 lb.ft).
- Stage 2 tighten bolts to 8 Nm (6 lb.ft).

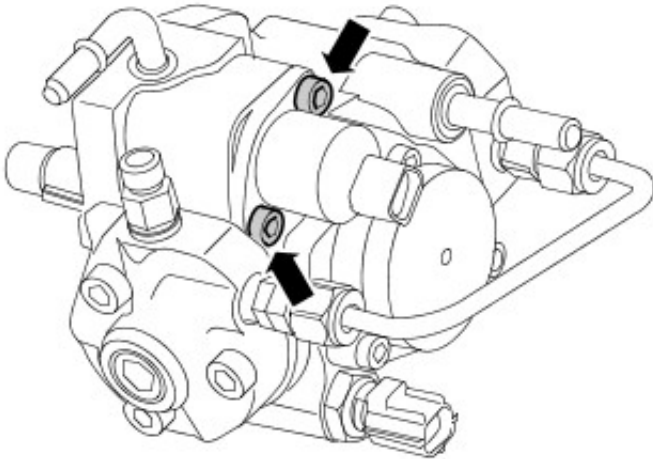

E105076

3. Connect fuel metering valve electrical connector.

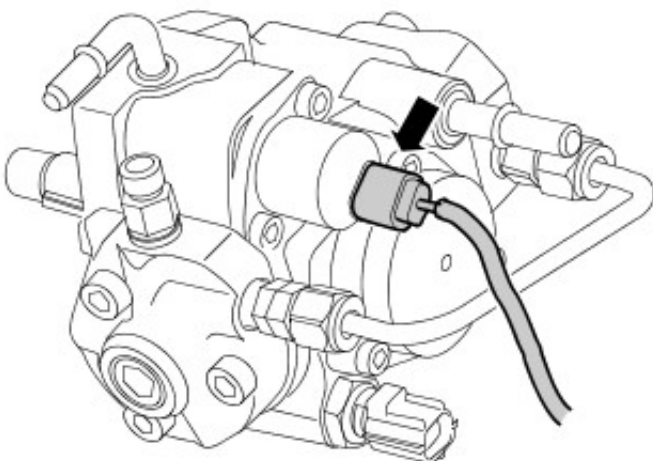

E105075