

PUBLISHED: 11-MAY-2011  
2011.0 RANGE ROVER (LM), 206-05

PARKING BRAKE AND ACTUATION

# LEFT PARKING BRAKE CABLE (G850438)

## REMOVAL

 **CAUTIONS:**

- It is essential that absolute cleanliness is observed when working on the parking brake actuator. Always cover any open orifices using lint free non-flocking material to prevent the ingress of foreign matter. Failure to follow this instruction may result damage to the components.
- The parking brake actuator fault memory must not be erased.

 **NOTES:**

- If the parking brake system has completed less than 50,000 cycles it is permissible to replace the parking brake cables. If over 50,000 cycles have been completed, then the parking brake cables can only be replaced as part of the parking brake actuator and cable assembly. The parking brake cycle count can be checked using the Land Rover approved diagnostic system, (ON/OFF = 1 cycle). If a parking brake cable becomes detached whilst the vehicle is being driven, a 'parking brake actuator unblocking procedure' may be required using the Land Rover approved diagnostic system. If a parking brake cable breaks then the complete parking brake actuator and cable assembly should be replaced.
- It is not necessary to carry out the parking brake shoe 'bedding-in procedure' if the rear brake discs or parking brake shoes have been removed for access to other components.

1. Using the Land Rover approved diagnostic system, drive the parking brake to the mounting position.

2.  **WARNING:**

Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

3. Disconnect the battery ground cable. For additional information, refer to: [Specifications - Armoured](#) (414-00 Battery and Charging System - General Information, Specifications).

4. Remove the rear wheels and tires.

5.

 **NOTE:**


The thread is left handed.

Remove the RH parking brake cable. For additional information, refer to: [Right Parking Brake Cable](#) (206-05 Parking Brake and Actuation, Removal and Installation).

6.

 **CAUTIONS:**

- Make sure that the area around the component is clean and free of foreign material.
- Make sure that no dirt or moisture enters the parking brake actuator during parking brake cable replacement.
- It is imperative that no damage is caused to the electrical connector or the module.
- Do not touch the electrical connections.

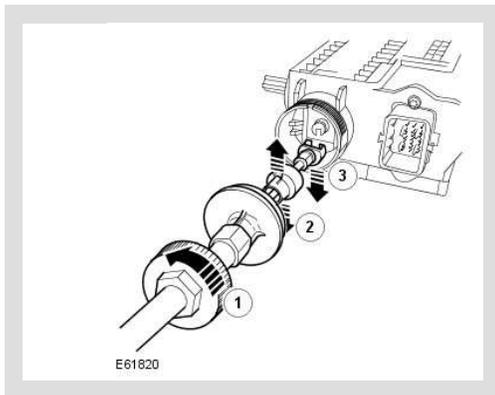

Remove the LH parking brake cable.

Release the nut.

Release the parking brake cable clip.

Release and remove the parking brake cable.

## INSTALLATION

1. Install the LH parking brake cable.

Attach the parking brake cable.

Install the parking brake cable clip.

Tighten the nut to 6 Nm (4 lb.ft).

2. Install the RH parking brake cable. For additional information, refer to: [Right Parking Brake Cable](#) (206-05 Parking Brake and Actuation, Removal and Installation).

---

3. Install the rear wheels and tires.

Tighten nuts to 140 Nm (103 lb.ft).

---

4. Connect the battery ground cable. For additional information, refer to: [Specifications - Armoured](#) (414-00 Battery and Charging System - General Information, Specifications).

---

5.  **CAUTION:**

The parking brake actuator fault memory must not be erased.

Test the parking brake for correct operation.